

EZ-KIT Lite™ Quick Start Guide

Thank you for purchasing this EZ-KIT Lite™ evaluation system. Before you begin to use your EZ-KIT Lite, you must first perform the following procedure, which leads you through the **software installation** and **hardware setup**.

For further information, please refer to the *EZ-KIT Lite Evaluation System Manual* on the CD-ROM.

Software Installation

1) Check the contents of your package and identify the following items:

- *Installation Quick Reference Card for VisualDSP++ Development Environment*
- *VisualDSP++™* development environment CD-ROM (CD includes the *EZ-KIT Lite* evaluation system software)
- EZ-KIT Lite board
- Power supply (universal 7.5V DC)
- USB cable (5-meter, type A to type B)
- CD-ROM sleeve, containing *DSP Solutions Desktop Reference*
- Registration form (to be filled out and returned to Analog Devices)

2) Ensure that your PC meets the following minimal requirements:

Windows® 98 or Windows® 2000
Intel (or comparable) 166 MHz processor
VGA monitor and color video card
2-button mouse
50 MB of free disk space on hard drive
32 MB of RAM
Full speed USB Port
CD-ROM Drive

Note: This EZ-KIT Lite does not run under Windows 95 or Windows NT.

3) Ensure that the VisualDSP++ Development Environment is installed.

- a. If the latest version of VisualDSP++ is installed, insert the VisualDSP++ CD into CD-ROM drive. Click on Install VisualDSP++. Click on Install Tools. On this prompt screen, select Modify to add the EZ-KIT Lite software. On the next Component prompt screen make your EZ-KIT Lite selection and begin install.
- b. If VisualDSP++ is not installed please refer to the *Installation Quick Reference Card for VisualDSP++ Development Environment* for further instructions. **Perform only tasks 1 and 2.** After you have completed the VisualDSP++ install.

Important: Please note that installing the latest version of VisualDSP++ will completely replace the older VisualDSP++™ versions on your computer, making them inoperable. If for some reason, you need to use the older version you will need to uninstall this version and re-install the older version.

Note: The VisualDSP++ serial number shipped with this EZ-KIT Lite evaluation system creates a permanent license, but **limits** the software's capability. For detailed information on these limitations refer to the *EZ-KIT Lite Restrictions* section in the *EZ-KIT Lite Evaluation System Manual*.

Hardware Installation

- 4) Plug the power supply into a wall outlet and plug its connector into the power receptacle on the EZ-KIT Lite board. Verify that the green LED (power) is lit.
- 5) Connect the USB cable to your PC and to the EZ-KIT Lite board.
The windows environment will recognize the new hardware and launch the *Add New Hardware Wizard*.
- 6) Follow the instructions in the *Add New Hardware Wizard*. The necessary install files are located in the root directory of the EZ-KIT Lite CD-ROM.
When the USB driver is finished loading, the yellow LED (USB Monitor) will remain lit.
- 7) Run VisualDSP++ by holding down the keyboard's **Ctrl** key while choosing **Start -> Programs -> VisualDSP -> VisualDSP++ for xxxx**.
The **New Session** dialog box appears.
- 8) In **Debug target**, select **EZ-KIT Lite** and click **OK**.

Now You're Ready to use your EZ-KIT Lite.

Run the **example programs** to become familiar with the:

- EZ-KIT Lite evaluation system
- VisualDSP++ development environment
- DSP

These examples are located on your hard drive in the subdirectory: ...VisualDSP\processor_family\EZ-KITs\processor\Examples

You can also write, execute, and debug your own software. Refer to VisualDSP++ **online Help**, which provides access to the Tools documentation (e.g., compiler, assembler). **Read** the *VisualDSP++ User's Guide* and the *VisualDSP++ Getting Started Guide* to learn about VisualDSP++.

For a detailed description of the EZ-KIT Lite board, refer to the *EZ-KIT Lite Evaluation System Manual*, which is located in the ...VisualDSP\Docs\ADSP-processor EZ-KIT subdirectory on your hard drive.

Limited Warranty

The EZ-KIT Lite evaluation board is warranted against defects in materials and workmanship for a period of one year from the date of purchase from Analog Devices or from an authorized dealer.