

## **DC1104 Software Quick Start Guide**

### **DC1223A-B hardware setup for use with DC1104:**

1. Position JP5 in the 5V position. Power up the DC1104 (then DC1223A-B derives its power supply from DC1104).
2. Position the JP1 and JP2 jumpers in their default RES positions.
3. Connect the DC1223A-B to the PC USB port and the DC1104 to the DC1223A-B through their 15 pin connectors.

### **DC1104 Software Installation:**

1. Copy the DC1104 files into a directory called DC1104 on the computer's default drive.
2. Run LTC4000Ser.exe.

### **Note:**

- The serpdv driver must be included in the directory the Labview executable programs are being run from.