

INSTALL SHUNT: JP1 - INT; JP2 - SEPARATE; JP4 , JP5, JP6 - LOW;
 JP8 - +12V INPUT; JP9 - GND.
 JP108 - +3.3V INPUT; JP109 - GND.
 JP111 - ON

