

INSTALL SHUNT: JP1 - EXT; JP2 - AUTO; JP4 , JP5; PIN 1 & 2
JP8 - +12V INPUT; JP9 - GND.

