



NOTES :

- JP1 = INSTALL SHUNT 0 POSITION
- JP2 = INSTALL SHUNT 0 POSITION

Assembly Top Drawing