

LTC3882EUJ / LTC3882EUJ-1  
PROGRAMMING BOARD  
DEMO CIRCUIT 2252A-



www.linear.com

(408) 432-1900


JP1

ENABLE  
WP (FOR LTC3882 ONLY)  
DISABLE


SKT1



 
GND




SCL

 

SDA

 


GPIO0

 

ALERTb

 PIN 1




SW1

ON OFF


D3

[ ]

 T0 DC1613A J2




JP7  
ASEL1

 

JP6  
ASEL0



 CHP25



CHP33



5V



3.3V

LINEAR TECHNOLOGY CORP.

TOP SILKSCREEN

DATE: 1-28-15