

ADP1046A EEPROM Programming

by Navdeep Singh Dhanjal, Hossain Opal, and Subodh Madiwale

INTRODUCTION

The ADP1046A offers a register map and an EEPROM that are programmed with settings for a specific power topology and application based on the user system preferences. This application note focuses on the hardware considerations and software procedures to program the ADP1046A in a production line environment.

HARDWARE

Figure 1 shows the recommended pin settings for the ADP1046A in the EEPROM programming environment. Use surface-mount components for all components. In addition, ceramic capacitors are recommended.

RECOMMENDED PIN SETTINGS

Table 1 lists the settings for the components shown in Figure 1.

Table 1. Component Settings

Component	Value	Unit	Comments
VDD Pin	3.3	V	
GND ^{1,2}			Ground plane of the board
NC			No connect pin; leave this pin floating
C1	0.5	μF	Capacitor 1
C2, C3	2.5	μF	Capacitor 2, Capacitor 3
R1, R2	5	kΩ	Resistor 1, Resistor 2
R3, R4	2.2	kΩ	Resistor 3, Resistor 4
R5	10	kΩ	Resistor 5, 0.1% accurate
R6, R7	10	Ω	Optional resistors

¹ One continuous ground plane must be present across the entire area of the board.

² To avoid noise interference, the SDA, SCL, and GND lines from the programmer to the device must be as small as possible.

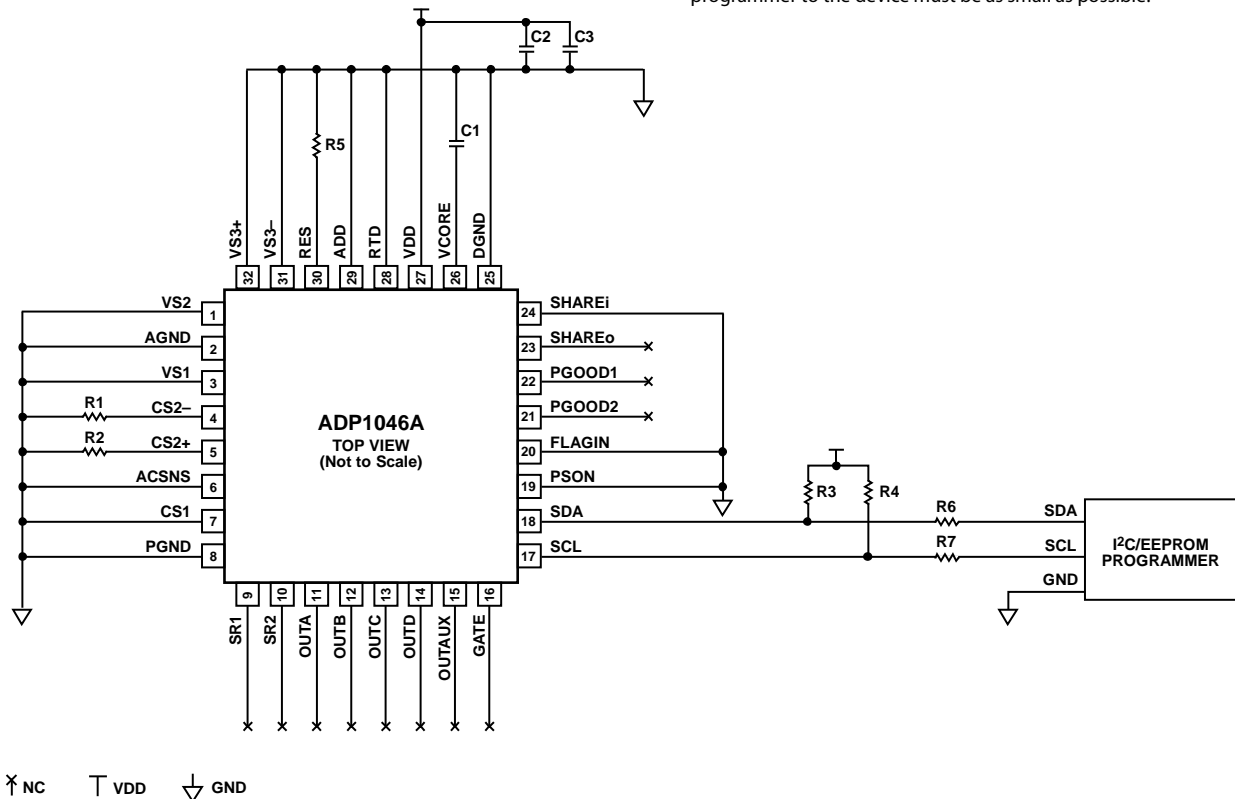


Figure 1. Recommended Pin Settings

TABLE OF CONTENTS

Introduction	1	Software Programming.....	4
Hardware	1	Standard EEPROM Programming.....	4
Recommended Pin Settings	1	Alternative EEPROM Programming.....	4
Revision History	2	Format for Storing Board Settings in EEPROM	5
Additional Layout Recommendations.....	3		

REVISION HISTORY

6/2016—Revision 0: Initial Version

Changes to Figure 5 and Board Settings Hexadecimal File Section	4
--	---

2/2016—Revision 0: Initial Version

ADDITIONAL LAYOUT RECOMMENDATIONS

If the [ADP1046A](#) is soldered on the board, then the components listed in Table 1 must be close to the pins, as shown in Figure 4. If a socket is used, place the components on the bottom side of the board near the pins, as shown in Figure 2.

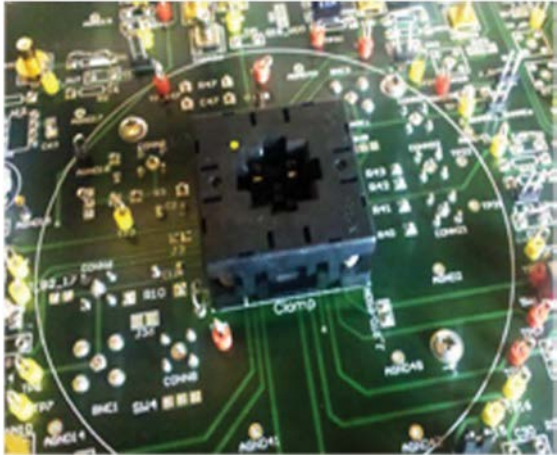


Figure 2. Board Layout

137700-002

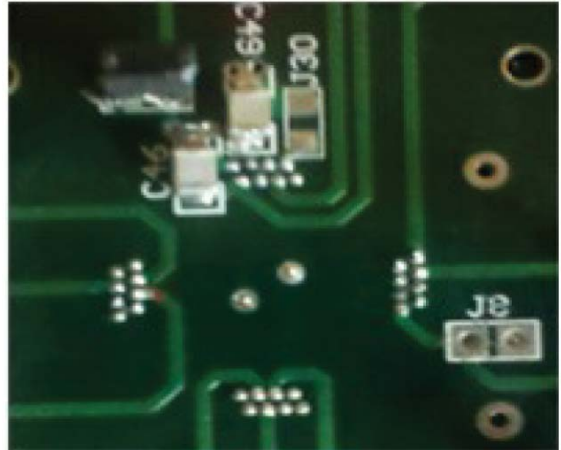


Figure 3. Board Layout, Bottom View

137700-103

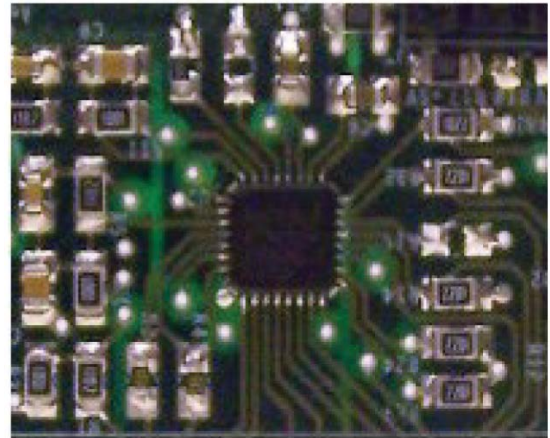


Figure 4. Board Layout, IC on Board

137700-104

SOFTWARE PROGRAMMING

There are two methods for programming register settings into the EEPROM of the device: standard or alternative.

STANDARD EEPROM PROGRAMMING

To program the register settings into the EEPROM using the standard method, take the following steps:

1. Read the register settings from the “.46r” file that is generated using either the [ADP1046A](#) graphical user interface (GUI) or a hex file and write the following register values to the corresponding registers of the device via I²C:
 - a. Write to Register 0x08 to Register 0x0F
 - b. Write to Register 0x22
 - c. Write to Register 0x26 to Register 0x2A
 - d. Write to Register 0x2C to Register 0x37
 - e. Write to Register 0x3B
 - f. Write to Register 0x3F to Register 0x5D
 - g. Write to Register 0x5F to Register 0x7D
2. Read back the values written and compare them to the register settings in the .46r file to ensure the write operation was executed correctly.
3. To unlock the EEPROM, a repeated write is required to Register 0x88. First, write 0xFF to Register 0x88 and then immediately write 0xFF to Register 0x88 again.
4. To upload the contents in the registers to the EEPROM, execute a send command to Register 0x82.
5. Wait for 50 ms for the upload to complete.
6. To lock the EEPROM, write 0x01 to Register 0x88.

ALTERNATIVE EEPROM PROGRAMMING

To program the board settings into the EEPROM using the alternative method, take the following steps and see Figure 5:

1. To unlock the EEPROM, a repeated write is required to Register 0x88. First, write 0xFF to Register 0x88 and then immediately write 0xFF to Register 0x88 again.
2. Erase EEPROM Page 2 by writing 0x02 to Register 0x87; wait 30 ms to for the erase to complete.
3. Set the address offset to zero by writing 0x0000 to Register 0x85.
4. Write to EEPROM Page 2 by performing a block write to Register 0x8D using the board data from the hexadecimal file.
5. Unlock the EEPROM by writing 0x01 to Register 0x88.

Example Using Hexadecimal File

```

ADP1046 Configuration.hex - Notepad
File Edit Format View Help
:01004A000035
:01004B000282
:01004C00C8EB
:01004D004072
:01004E008130
:01004F00416F
:01005000C8E7
:0100510004AA
:010052008825
:0100530000AC
:0100540003A8
:010055004268
:010056008021
:010057003068
:010058005057
:010059000046
:01005A0000A5
:01005B003E66
:01005C0000A3
:01005D0000A2
:01005E0000A1
:01005F0003ED
:010060002778
:01006100E08E
:010062009802
:010063003E5E
:010064000CDF
:010065004F4B
:010066003366
:010067003D58
:01007100325C
:010072000984
:01007300AAE2
:010074001D6E
:010075000C7E
:010076000386
:010077000286
:010078000087
:010079000086
:01007A000481
:01007B000084
:01007C000083
:01007D003F43
:020050000079
7E008D000102036000F76000F46000F3B000F48000F4B000F48
000F18000F18000F18000F16400F8A000F46000F46000F45DC0
FC6400F70000000000006E00F9A000F56000F26000F5000000
00000000000000008000F10000000000000000000000000000
0000006C00F68000F100000000000000000000000000000000
007E
:0000001FF
End of Hex File
  
```

Figure 5. EEPROM Alternative Programming Using Hexadecimal File

Board Settings Hexadecimal File

The hexadecimal file reads as follows:

```

:7E008D000102036000F76000F46000F3B000F48000F4B000F48
000F18000F18000F18000F16400F8A000F46000F46000F45DC0
FC6400F70000000000006E00F9A000F56000F26000F50000000
00000000000000008000F10000000000000000000000000000
0000006C00F68000F100000000000000000000000000000000
007E
  
```

Note the following information that is embedded in the file format:

- The first two digits after the colon, 7E, represent the byte count. In this case, it is 126 bytes.
- The next four digits, 008D, represent the address.
- The next two digits, 00, represent the record type.
- The remaining digits, beginning with 0102036 and ending with the final string of 36 zeros, represent the data.
- The final two digits, 7E, represent the checksum.

FORMAT FOR STORING BOARD SETTINGS IN EEPROM

The data that is written to the EEPROM for board settings starts with 0x010203, it is used by the graphical user interface (GUI) to detect if valid board settings data is present in Page 2 of the EEPROM.

Each board setting is represented as three-byte data in the hexadecimal file. The first two bytes represent the mantissa and the third byte represents the exponent. For example, the first board setting, input voltage of 48 V, is represented as 0x6000F7. To understand the breakdown of the hexadecimal code, see Table 2.

Table 2. Hexadecimal Code Segments

Mantissa		Exponent
High Bits	Low Bits	
0x60	0x00	0xF7

Converting Hexadecimal Data to Board Settings

- Mantissa = 0x6000
- Mantissa in decimal = 24,576
- Exponent = 0xF7
- Exponent after twos complement = -9
- Input voltage = $24,576 \times 2^{-9} = 48 \text{ V}$

Figure 6 shows the ADP1046A GUI window with the board settings. These settings are further defined in Table 3 where the Item column represents the component locator numbers within Figure 6.

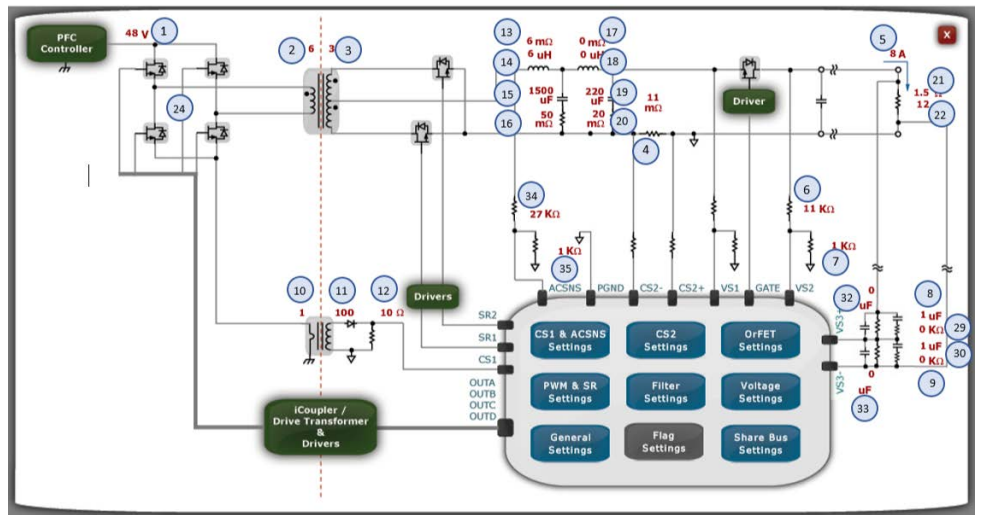


Figure 6. ADP1046A GUI Window with Board Settings

13700-004

Table 3. Component Values for Board Settings


Item	Board Value	Mantissa		Exponent
		High Bits	Low Bits	
1	Input voltage = 48 V	0x60	0x00	0xF7
2	N1 = 6	0x60	0x00	0xF4
3	N2 = 3	0x60	0x00	0xF3
4	R (CS2) = 11 mΩ	0xB0	0x00	0xF4
5	I (load) = 8 A	0x80	0x00	0xF4
6	R1 = 11 kΩ	0xB0	0x00	0xF4
7	R2 = 1 kΩ	0x80	0x00	0xF1
8	C3 = 1 μF	0x80	0x00	0xF1
9	C4 = 1 μF	0x80	0x00	0xF1
10	N1 (CS1) = 1	0x80	0x00	0xF1
11	N2 (CS1) = 100	0x64	0x00	0xF8
12	R (CS1) = 10 Ω	0xA0	0x00	0xF4
13	ESR (L1) = 6 mΩ	0x60	0x00	0xF4
14	L1 = 6 μH	0x60	0x00	0xF4
15	C1 = 1500 μF	0x5D	0xC0	0xFC
16	ESR (C1) = 50 mΩ	0x64	0x00	0xF7
17	ESR (L2) = 0 mΩ	0x00	0x00	0x00
18	L2 = 0 μH	0x00	0x00	0x00
19	C2 = 220 μF	0x6E	0x00	0xF9
20	ESR (C2) = 20 mΩ	0xA0	0x00	0xF5
21	R (normal mode) = 1.5 Ω	0x60	0x00	0xF2
22	R (light load mode) = 12 Ω	0x60	0x00	0xF5
23	Capacitor across R1 and R2 = 0 μF	0x00	0x00	0x00
24	Topology = 0	0x00	0x00	0x00
25	Switches/diodes = 0	0x00	0x00	0x00
26	High-side/low-side sense (CS2) = 0 mΩ	0x00	0x00	0x00
27	Second LC stage = 1 (only when Item 17 to Item 20 are populated)	0x80	0x00	0xF1
28	CS1 input type = 0 (default value for internal use)	0x00	0x00	0x00
29	R3 = 0 kΩ	0x00	0x00	0x00
30	R4 = 0 kΩ	0x00	0x00	0x00
31	Pulse-width modulator (PWM) main = 0 (default value for internal use)	0x00	0x00	0x00
32	C5 = 0 μF	0x00	0x00	0x00
33	C6 = 0 μF	0x00	0x00	0x00
34	R6 = 27 kΩ	0x6C	0x00	0xF6
35	R7 = 1 kΩ	0x80	0x00	0xF1

Resonant Mode Topology

For resonant mode topology (Figure 7), the additional components require different settings than the general board settings listed in Table 3. The resonant mode settings are listed in Table 4.

Table 4. Resonant Mode Components

Item	Board Value
1	Input voltage = 385 V
2	N1 = 6
3	N2 = 3
4	R (CS2) = 2.2 m Ω
5	I (load) = 12.5 A
6	R1 = 46.4 k Ω
7	R2 = 1 k Ω
8	C3 = 1 μ F
9	C4 = 1 μ F
10	N1 (CS1) = 1
11	N2 (CS1) = 100
12	R (CS1) = 20 Ω
13	ESR (L1) = 6 m Ω
14	L1 = 6 μ H
15	C1 = 680 μ F
16	ESR (C1) = 50 m Ω
17	ESR (L2) = 0 m Ω
18	L2 = 0 μ H
19	C2 = 330 μ F
20	ESR (C2) = 20 m Ω
21	R (normal mode), load = 3.84 Ω
22	R (light load mode), load = 24 Ω
23	Capacitor across R1 and R2 = 0 (1 = yes, 0 = no)
24	Topology = 7 (0 = full bridge, 1 = half bridge, 2 = two switch forward, 3 = interleaved two switch forward, 4 = active clamp forward, 5 = resonant mode, 6 = custom)
25	Switches/diodes = 0 (0 = switches, 1 = diodes)
26	High-Side/Low-Side Sense (CS2) = 0 (1 = high-side sense, 0 = low-side sense)
27	Second LC stage = 1 (1 = yes, 0 = no)
28	CS1 input type = 0 (1 = ac, 0 = dc)
29	R3 = 0 k Ω
30	R4 = 0 k Ω
31	Pulse-width modulator main = 0 (0 = OUTA, 1 = OUTB, 2 = OUTC, 3 = OUTD, 4 = SR1, 5 = SR2, 6 = OUTAUX)
32	C5 = 0 μ F
33	C6 = 0 μ F
34	R6 = 27 k Ω
35	R7 = 1 k Ω
36	C7 = 0.009 μ F
37	L3 = 70 μ H
38	Lm = 400 μ H
39	ResF = 108 kHz
40	R8 = 145 m Ω
41	R9 = 10 m Ω

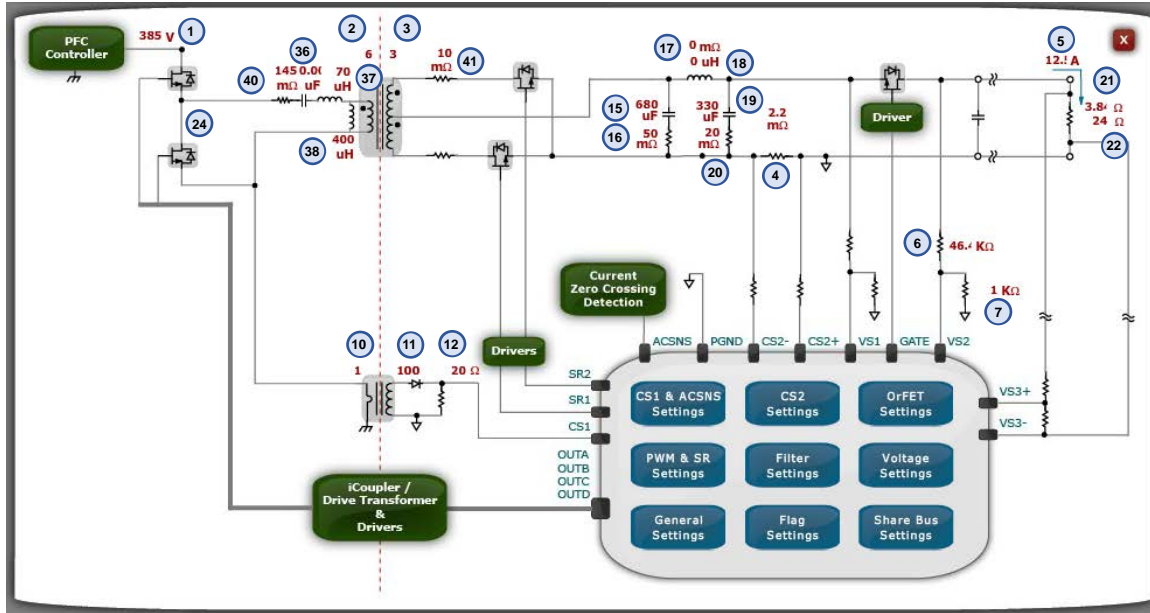

13700-005


Figure 7. ADP1046A GUI Window with Board Settings for Resonant Mode

Phase Shifted, Full Bridge Topology

For phase shifted, full bridge topology (Figure 8) the additional components require different settings than either the general board settings (Table 3) or the resonant mode settings (Table 4). The phase shifted, full bridge settings are listed in Table 5.

Table 5. Phase Shifted Full Bridge Components

Item	Board Value
1	Input voltage = 385 V
2	N1 = 6
3	N2 = 3
4	R (CS2) = 2.2 m Ω
5	I (load) = 12.5 A
6	R1 = 46.4 k Ω
7	R2 = 1 k Ω
8	C3 = 1 μ F
9	C4 = 1 μ F
10	N1 (CS1) = 1
11	N2 (CS1) = 100
12	R (CS1) = 20 Ω
13	ESR (L1) = 6 m Ω
14	L1 = 6 μ H
15	C1 = 680 μ F
16	ESR (C1) = 50 m Ω
17	ESR (L2) = 0 m Ω
18	L2 = 0 μ H
19	C2 = 330 μ F
20	ESR (C2) = 20 m Ω
21	R (normal mode), load = 3.84 Ω
22	R (light load mode), load = 24 Ω
23	Capacitor across R1 and R2 = 0 (1 = yes, 0 = no)
24	Topology = 1 (0 = full bridge, 1 = half bridge, 2 = two switch forward, 3 = interleaved two switch forward, 4 = active clamp forward, 5 = resonant mode, 6 = custom)
25	Switches/diodes = 0 (0 = switches, 1 = diodes)
26	High-side/low side sense (CS2) = 0 (1 = high-side sense, 0 = low-side sense)
27	Second LC stage = 1 (1 = yes, 0 = no)
28	CS1 input type = 0 (1 = ac, 0 = dc)
29	R3 = 0 k Ω
30	R4 = 0 k Ω
31	PWM main = 0 (0 = OUTA, 1 = OUTB, 2 = OUTC, 3 = OUTD, 4 = SR1, 5 = SR2, 6 = OUTAUX)
32	C5 = 0 μ F
33	C6 = 0 μ F
34	R6 = 27 k Ω
35	R7 = 1 k Ω
36	C7 = 0.009 μ F
37	L3 = 70 μ H
38	Lm = 400 μ H
39	ResF = 108 kHz
40	R8 = 145 m Ω
40	R9 = 10 m Ω

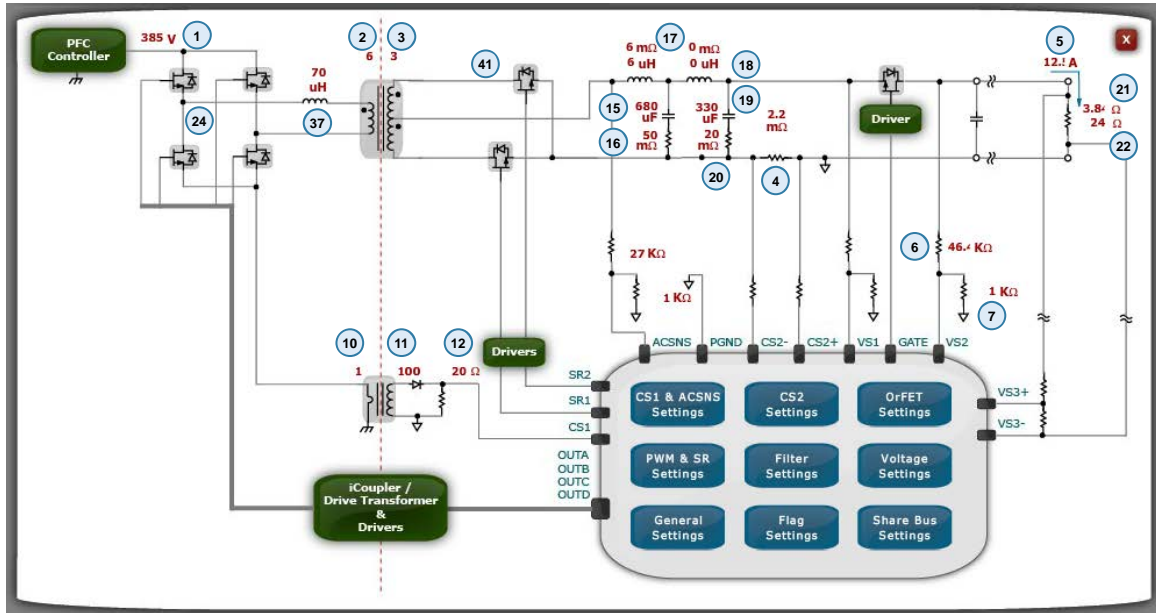

13700-006

Figure 8. ADP1046A GUI Window with Board Settings for Phase Shifted, Full Bridge Topology