



---

**Technical Notes on using Analog Devices' DSP components and development tools**

Phone: (800) ANALOG-D, FAX: (781) 461-3010, EMAIL: [dsp.support@analog.com](mailto:dsp.support@analog.com), FTP: [ftp.analog.com](ftp://ftp.analog.com), WEB: [www.analog.com/dsp](http://www.analog.com/dsp)

---

### **Booting on the ADSP-2192**

The ADSP-2192 currently supports booting via either the PCI or USB interfaces. The tasks performed by the ADSP-2192 boot loader kernel (which is located at address 0x14000 in Program ROM) will be two-fold: To determine how the DSP is configured to boot (PCI or USB), and setting up and initializing appropriate DSP registers, to facilitate the rest of booting.

Detecting the presence of a serial EEPROM on the NVRAM interface and reading data from the serial EEPROM

The task of writing device drivers to facilitate booting of the DSP via these interfaces is with the user.

#### **RESET Options on ADSP-2192**

There are 3 types of RESET on the ADSP-2192. They are:

- 1 Power-on RESET
- 2 Forced RESET via PCI/USB
- 3 Software RESET

As currently proposed, for Power-on-RESET program flow will jump to the first location of the loader kernel at address 0x14000 and commence execution. A RESET via the PCI or USB device will cause program flow to jump to the command monitor that is part of the loader kernel. The serial EEPROM detection/reading subroutines will be bypassed. In case of a software RESET, the loader kernel will jump to the first location of internal PM memory at address 0x10000 and commence execution.

## ADSP-2192 Architecture and Memory Map

The ADSP-2192 is a 16-bit DSP with dual 219x cores. The DSP architecture and memory map is shown in Figures 1 and 2, respectively. For a detailed discussion, please refer the ADSP-2192 datasheet.

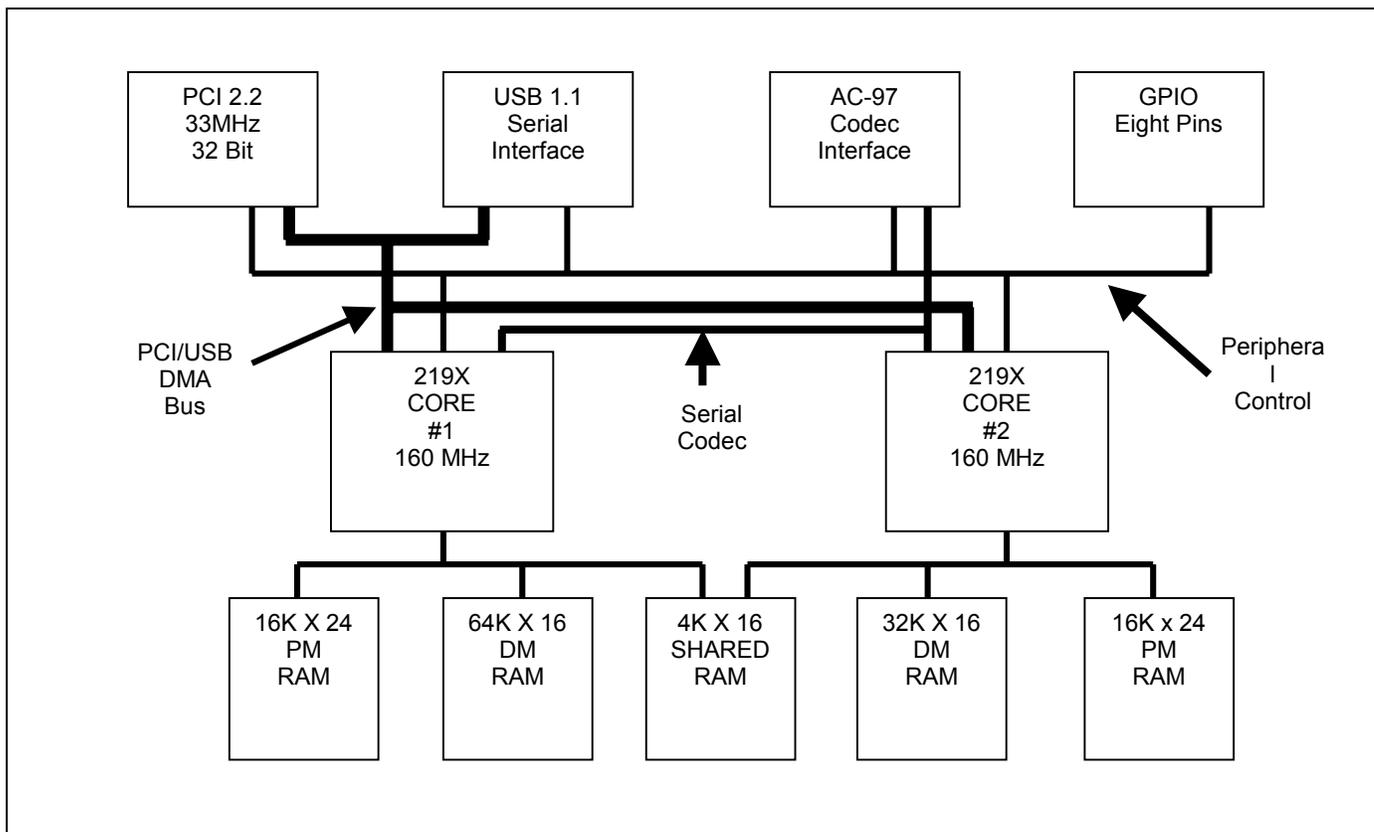


Figure 1. ADSP-2192 architecture


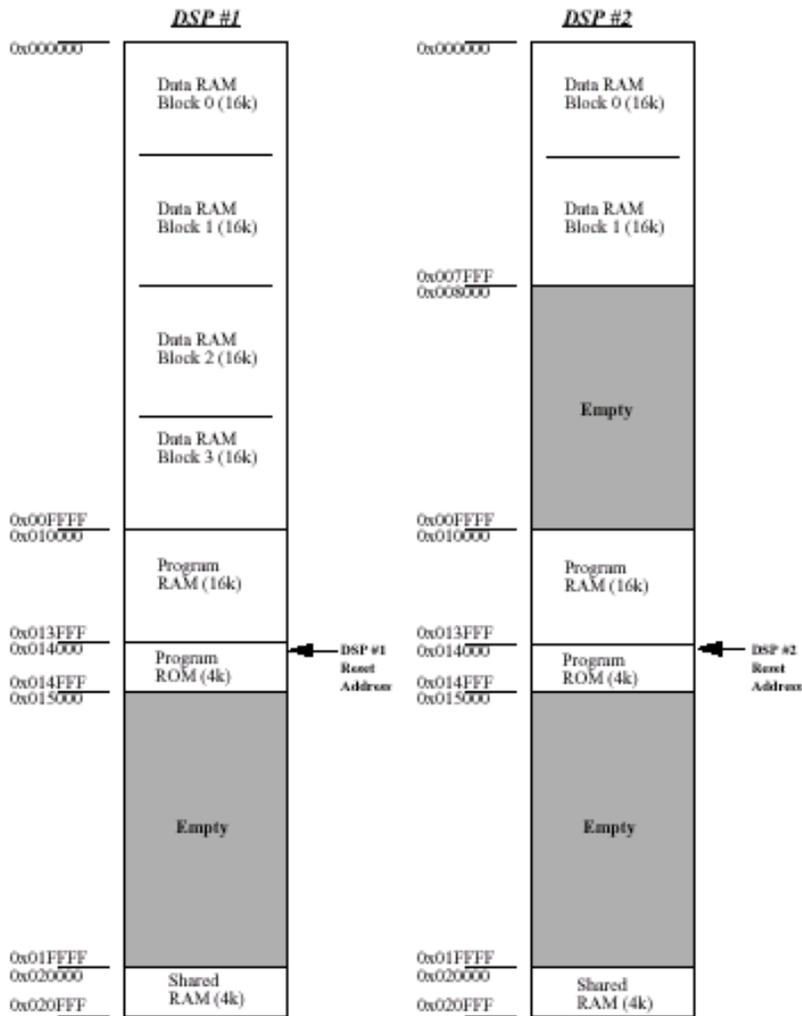


Figure 2. ADSP-2192 Memory Map

## Booting Flowchart

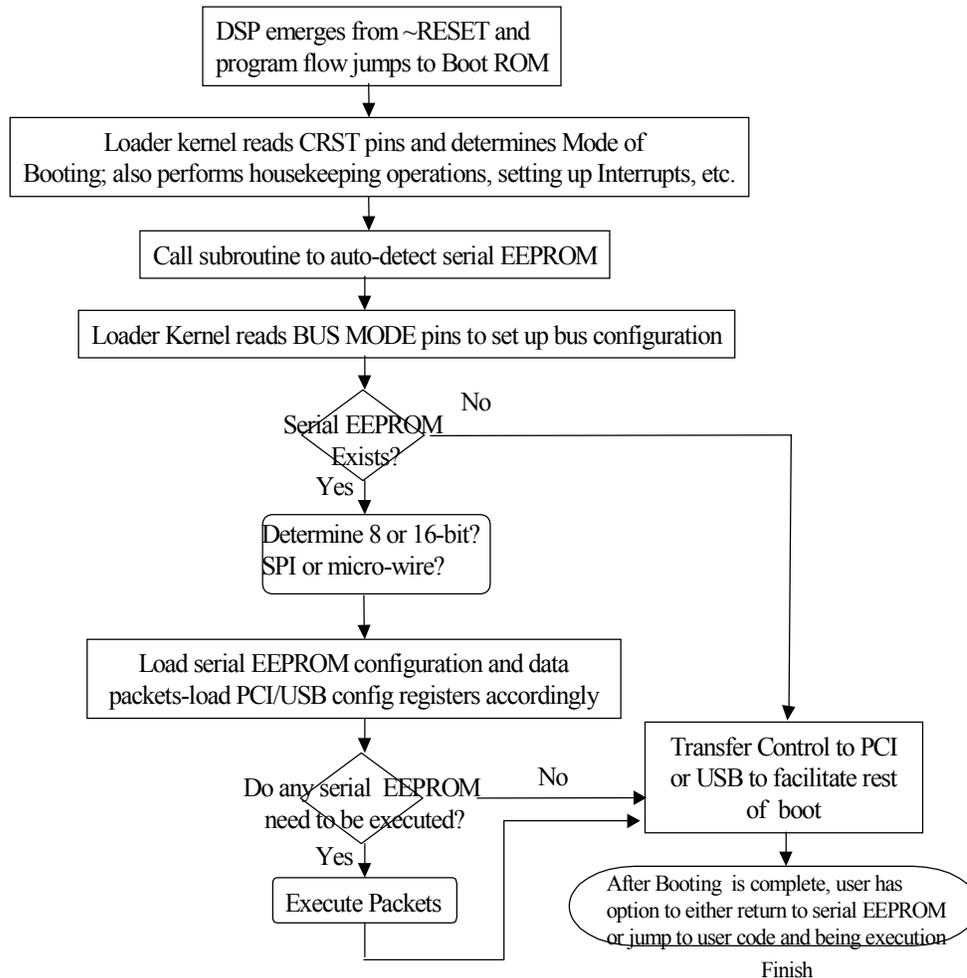

On emerging from RESET the loader kernel in DSP1's ROM alone will attempt to read the serial EEPROM. The loader kernel for DSP2 will not boot via the serial EEPROM. It will wait in a loop until DSP1 has completed reading data from the serial EEPROM, at which point, both DSPs will be booted directly via the PCI or USB interfaces.

### ***Program Flow for the loader kernel***

Upon recovering from RESET, the ADSP-2192 jumps to the first location of the Boot ROM at address 0x14000, which is the start of the loader kernel. The first task performed by the loader kernel is to determine the type of RESET and the source of booting. This information is available by reading bits 8 and 9 (CRST<1:0>) of the Chip Mode/Status Register (CMSR) which determine the nature of DSP RESET.

CRST <1:0>	RESET MODE
00	Power-on Reset
01	<i>reserved</i>
10	PCI/ISA/USB Hard Reset
11	Soft Reset from CMSR RST Bit

Table 1. ADSP-2192 RESET modes

Next, the loader kernel executes some housekeeping code, which consists of setting up and configuring interrupts. It calls a routine which copies an interrupt table into the appropriate location in DSP RAM, with only the TIMER interrupt enabled. The timer will be used if interfacing with a serial EEPROM. Once the interrupt vector table and the corresponding registers have been configured, the loader kernel determines whether a serial EEPROM is connected to the NVRAM interface. This is done by a call to a subroutine that auto-detects a serial EEPROM. The detection routine verifies the existence of an external EEPROM connected to the NVRAM interface of the chip. If a device does exist, parameters needed to communicate with the device are loaded into scratch locations in data memory. Currently, the code will detect 8-bit SPI EEPROMs that require either 8 or 16 bits of address, and 16-bit 3-wire Microwire EEPROMs that require either 6 or 8 bits of address.

If it is determined that the reset source was a power-on reset, the BUSMODE pins of the chip are read to determine whether boot is via PCI/USB/Sub-ISA or CardBUS interface. Accordingly, any default configuration needed for the current bus mode is done in this routine. Most of the default configuration is done by hardware containing appropriate default values on coming out of RESET. Any additional configuration is done in software from the serial EEPROM.

Bits 10 and 11 of the CMSR Register (BUS<1:0>) determine the bus modes that the DSP comes up with. These bits are only sensed at reset, and ignored thereafter.

Bus Type	BUS MODE 1 Pin	BUS MODE 0 Pin	SCFG:BUS(1:0) Register field (bits 11:10)
PCI or Mini-PCI	GND	GND	00
CardBus PC-Card	GND	Open	01
Sub-ISA	Open	GND	10
USB Serial Bus	Open	Open	11

Table 2. ADSP-2192 Bus Modes

Once the bus configurations have been configured (and if it was determined that a serial EEPROM exists), the loader kernel calls a function to commence reading data from the serial EEPROM. Data format of serial EEPROM boot-stream is described in the next section.

After the loader kernel has finished reading data from the serial EEPROM, it proceeds to set up and commit bus configurations for the rest of booting via either the PCI or USB interfaces.

For example, for PCI this means that the configuration registers are set to be read-only and the part will respond to PCI requests from the system host. For USB, the part will enter an idle loop and allow the system host to detect and configure the part. (note: There is currently no configuration process required for Sub-ISA mode.)

The final task performed by the loader kernel after bus configuration and transferring control to PCI or USB is to enter an infinite loop, waiting for instructions. A pre-defined memory address - DM(0x000000) - is regularly checked for commands. Once the PCI or USB device has completed booting the DSP, they can write an instruction to this pre-defined location and have the DSP execute any one of a list of supported commands. This include:

1. jump to program memory without returning. This instruction is used to leave the loader kernel and begin user code
2. read word from EEPROM
3. enable write mode on EEPROM
4. write word to EEPROM
5. re-read patch block from EEPROM Used if bus configuration may have overwritten locations
6. enter power-down state

In addition to executing these commands while still in the loader kernel command loop, any piece of user code during runtime may perform the above operations by writing the appropriate value into the pre-defined memory address, and perform a CALL to address 0x014F00 (location in the ROM). This will cause the loader kernel to perform the requested command and return control to the user code. Table 3 shows the exact values and description of the various functions supported.

Value	Description	Argument 1	Argument 2	Argument 3
0x0000	nop	N/A	N/A	N/A
0x0004	jump_to_code	N/A	dest. addr	N/A
0x0006	eeeprom_write_enable	N/A	N/A	N/A
0x0002	eeeprom_write_word	eeeprom addr	source addr	source page
0x0005	eeeprom_write_imm_data	eeeprom addr	imm. value	N/A
0x0001	eeeprom_read_word	eeeprom addr	dest. addr	dest. page
0x0003	read_patch_block	eeeprom addr	N/A	N/A
0x0007	powerdown dsp	N/A	N/A	N/A

Table 3. Function values

In the case of a command requiring multiple arguments, the arguments are placed in DM(0x0001), DM(0x0002), and DM(0x0003) respectively.

### ***Boot-stream format***

The serial EEPROM boot-stream format is shown in Figure 3. For the sake of simplifying the loader kernel, the function that communicates with the serial EEPROM will present all received serial EEPROM data (regardless of whether it comes from an 8-bit or 16-bit EEPROM) as 16-bit data to the loader kernel software. While this eliminates the need to have separate sub-routines for 8-bit and 16-bit EEPROMs, this will not have any effect on the external communication with the EEPROM itself.

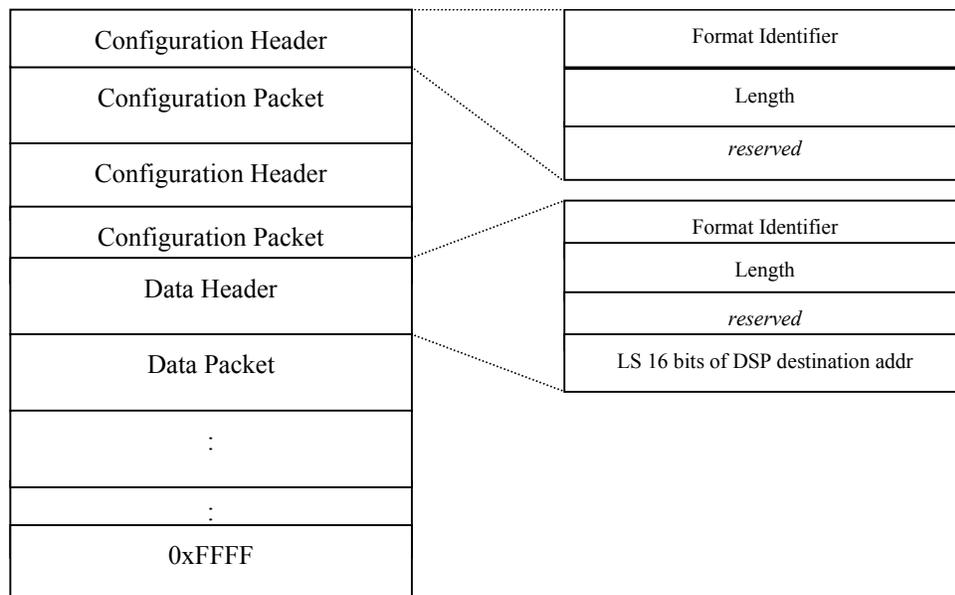


Figure 3. Serial EEPROM boot-stream format

There are two types of packets that make up a boot-stream:

*Configuration packets (or control packets)*

These are packets which contain alternative configuration or register contents that will override the default values;

Data can be contained within the external prom of the 2192 within several type of packets. Configuration packets for each of the major bus modes (PCI, CardBus, USB, Sub-ISA) contain the information required to initialize these interfaces. Inclusion of a configuration packet for any of these interfaces is optional; if no packet is found, a default configuration will be used. Patch code packets can contain code that will be copied into program memory of either DSP and optionally executed after PROM reading has been completed.

Any configuration packets on the PROM must be located at the low end of the addressable space, before any patch code. If a configuration packet exists which matches the current bus mode (as determined by the BUSMODE<1:0> pins of the chip), that packet will be processed and register values set accordingly.

Only one configuration packet for a given bus mode should exist in the PROM, though packets for non-active interfaces are allowed (i.e., two PCI packets on the same PROM is disallowed, but a single PROM could hold both a PCI packet and a USB packet).

Patch code should immediately follow the last configuration packet, or, if no configuration packets exist, it should be in the first memory location. There can be any number of patch code packets that will write code into any number of locations in program memory. It is required that all patch code for DSP1 precede any patch code for DSP2. Only one block of patch code should have the execute flag set; after all PROM reading has completed, the DSP will vector to the flagged code. If no code was flagged, the DSP will idle until woken up by the host interface.

Header Format for Configuration Packets

All configuration packets will have a header in the following format:

Format Identifier	address <i>n</i>
Length *	<i>n+1</i>
Test Use	<i>n+2</i>

Where “Length” is the number of 16-bit words in the packet, not including the header. The Test Use field should be zero for all packets. The Format Identifier contains information about the type of configuration information included in the packet.

Format Identifier

Individual bits within the “format identifier” word have the following functionality:

7	6:5	4	3	2	1::0
Type	Busmode	16/8	unused	unused	PCI function

Bit 7                      Type                      always 1 for configuration packets

Bits 6:5	Busmode	00 = PCI 01 = CardBus 10 = USB 11 = Sub-ISA
Bit 4	16vs8	1 if the PROM has 16-bit words 0 if the PROM has 8-bit words
Bits 3:2	unused	These bits are reserved. They should be written to 0.
Bits 1:0	PCI function #	These bits are only defined for a PCI configuration packet  00 if 1 function is enabled 01 if 2 functions are enabled 10 if 3 functions are enabled 11 invalid

### Format of PCI Configuration Packets

PCI configuration packets are always of a fixed size and format, regardless of the number of PCI functions enabled. There are 7 write-able registers in PCI configuration space for a given functions, and there are 3 possible functions, which means that each PCI config packet contains register values for a total of 21 registers. If one or more of the PCI functions is not in use, the values of the registers corresponding to that function are don't cares, but they must be included in the PROM.

The seven config registers are listed within the packet in order or increasing address, so the order within the packet is as follows:

1. Vendor ID
2. Device ID
3. Lower 8 bits = Rev ID  
Upper 8 bits = 8 LSBs of Class Code
4. Upper 16 bits of Class Code
5. Subsystem Vendor ID
6. Subsystem Device ID
7. Power Management Capabilities Register

The complete PCI config packet will then be 24 (16-bit) words long, containing three words of header, then 3 sets of register values for PCI functions 0, 1, and 2, respectively. Since the Length field in the header refers only to data words, this field will always be set to 21 for PCI config packets.

*Note:* ADI vendor ID = 0x11D4. ADI device IDs for ADSP-2192 are 0x2192, 0x219A, and 0x219E for PCI function 0,1, and 2 respectively.

### Format of USB Configuration Packets

USB configuration packets contain only the configuration header and five 16-bit register values. The rest of the USB configuration is handled by the USB driver during the handshake process. The registers are listed in the config packet in the following order:

1. Vendor ID
2. Product ID
3. Release Number
4. Attributes
5. Max Power

The complete USB packet should then be 8 (16-bit) words long, containing three words of header, then 5 words of data. The length field for all USB config packets should therefore be 5.

*Patch packets (or data packets)*

Patch packets contain code or data that will be copied into data, program, or shared memory as the packet is processed. There can be any number of patch packets addressing any number of banks of memory in the EEPROM. Optionally, a patch packet written into program memory can be given an EXECUTE flag. This code will be executed in the form of a function CALL after all EEPROM packets have been processed, but before the bus configuration is finalized. (note: any code executed this way must conclude with an RTS).

Header Format for Patch Packets

All patch packets will have a header in the following format:

Format Identifier	address <i>n</i>
Length	<i>n+1</i>
Test Use	<i>n+2</i>
DSP Address	<i>n+3</i>

Length and Test Use are defined in the same way as for the configuration packets. The DSP address field refers to the lower 16 bits only; the upper 8 bits of address (the memory page) are encoded in the Format Identifier. The Format Identifier contains information about the type of configuration information included in the packet.

Format Identifier

Individual bits within the “Format Identifier word” for a data packet are defined below:

7	6:5	4	3	2	1	0
Type	Mem Page	16/8	unused	Execute	unused	unused

- Bit 7 Type                    always 0 for patch code packets
  
- Bits 6:5 Mem Page        00 = write to page 0 memory (data memory)  
                                   01 = write to page 1 memory (program memory)  
                                   10 = write to page 2 memory (shared memory)  
                                   11 = invalid

Bit 4	16vs8	0 if the PROM has 8-bit words 1 if the PROM has 16-bit words
Bit 3	unused	This bit is reserved. It should be written to 0.
Bit 2	Execute	0 to copy data into memory without execution 1 to execute code before final configuration
Bits 1:0	unused	These bits are reserved. They should be written to 0.

No more than one patch header may have the execute flag set, and it must be a block written to page 1 program memory. If any code is tagged with this flag, it will be executed before the final configuration is completed in PCI or USB mode.

The 16- or 24-bit data should be packed into the PROM as shown below. If the Mem Page field is set to program memory, it is assumed that the data is packed as 24-bit wide data words, and will be written accordingly. Otherwise, 16-bit data is assumed.

If 24-bit data is being packed, there must be an even number of 24-bit words in the patch code. An extra 'nop' may be padded to the code if necessary.

#### 8-bit vs 16-bit EEPROMs

All data fields are considered to be 16-bit fields, taking up a single word of 16-bit PROMs. In the case of SPI EEPROMs, which are 8-bit devices, each field will take up two PROM locations.

All user accessible routines within the boot code refer to only 16-bit locations, therefore addressing SPI devices in two word chunks.

#### *Data formats in EEPROM*

Data for the serial EEPROM will have the following format. Individual bits within a word are typically shifted in or out starting with the most-significant bit.

#### 16-bit data in 16-bit PROM

MSB1	LSB1
MSB2	LSB2
MSB3	LSB3
:	:

16-bit data in 8-bit PROM

MSB1
LSB1
MSB2
LSB2
MSB3
LSB3
:

24-bit data in 16-bit PROM

MSB1	NSB1
LSB1	MSB2
NSB2 <sup>#</sup>	LSB2
MSB3	NSB3
LSB3	MSB4
:	:

24-bit data in 8-bit PROM

MSB1
NSB1
LSB1
MSB2
NSB2
LSB2
MSB3
NSB3
LSB3
:

The boot stream may contain any number of configuration packets, followed by any number of data packets. However, it is required that all configuration packets must come before data packets.

Each packet contains a header that contains information about the starting destination address, type, and size of the data comprising that packet.

Currently, configuration packets are defined for PCI/CardBus mode and USB mode. The boot stream is terminated with the bit pattern 0xFFFF.

---

<sup>#</sup> NSB stands for “next significant byte”