

16-Channel Power Supply System Featuring the LTC2980 Power System Manager

DESCRIPTION

The DC2198A is a demonstration system for the [LTC®2980](#) 16-channel I²C/SMBus/PMBus power system manager with EEPROM. The LTC2980 monitors and controls 16 power supply rails. The DC2198A demonstrates the ability of the LTC2980 to sequence, trim, margin, supervise, monitor, and log faults for sixteen power supply rails. Each power supply channel's output voltage is monitored and the LTC2980 monitors its own internal die temperature.

The DC2198A is a single circuit board that contains sixteen independent power supply rails. The board employs sixteen LTC3405A 300mA switch-mode regulators, which are configured to be controlled by the LTC2980. The LTC2980 is available in a BGA package and contains two [LTC2977](#) devices. This board provides a sophisticated 16-channel digitally programmable power supply system. The rail voltages are programmable within the trim range shown in the Performance Summary.

This demonstration system is supported by the LTpowerPlay® graphical user interface (GUI) that enables complete control of all the features of the LTC2980. Together, the LTpowerPlay software and DC2198A hardware system create a powerful development environment for designing and testing LTC2980 configuration settings. These settings can be stored in the device's internal EEPROM or in a file. This file can later be used to order pre-programmed devices or to program devices in a production environment. The software displays all of the configuration settings and real-time measurements from the LTC2980. Telemetry allows easy access and decoding of the fault log created by the LTC2980. The board comes pre-programmed with the EEPROM values appropriate for the 16 power supplies used on the DC2198A. Just plug and play!

Multiple DC2198A boards can be cascaded together to form a high channel count power supply (see Setup Procedure for Multi-Board Arrays). This cascaded configuration demonstrates features of the LTC2980 which enable timing and fault information to be shared across multiple ICs. The user can configure up to four

DC2198A boards, thereby controlling up to 64 separate power supply rails. Larger arrays of LTC2980s are supported through programmable I²C base address or bus segmentation.

The DC2198A demo board can be powered by an external power supply, such as a +12VDC supply. Communication with the software is provided through the DC1613 USB-to-I²C/SMBus/PMBus Controller. The following is a checklist of items which can be obtained from the Analog Devices website or Analog Devices Field Sales.

- USB-to-I²C/SMBus/PMBus Controller ([DC1613A](#))
- [LTpowerPlay](#) Software

DC2198A FEATURES

- Sequence, Trim, Margin, and Supervise Sixteen Power Supplies
- Manage Faults, Monitor Telemetry, and Create Fault Logs
- PMBus Compliant Command Set
- Supported by LTpowerPlay GUI
- Margin or Trim Supplies to 0.25% Accuracy
- Fast OV/UV Supervisors Per Channel
- Supports Multichannel Fault Management
- Automatic Fault Logging to Internal EEPROM
- Operates Autonomously without Additional Software
- Sixteen OV/UV V_{OUT} and Two V_{IN} Supervisors
- Telemetry Reads Back V_{IN}, V_{OUT}, and Temperature
- 16-Channel Time-Based Output Sequencer
- I²C/SMBus Serial Interface
- Powered from 6V to 14VDC
- Available in 144-Pin 12mm × 12mm BGA

[Design files for this circuit board are available.](#)

All registered trademarks and trademarks are the property of their respective owners.

DEMO MANUAL DC2198A

PERFORMANCE SUMMARY Specifications are at $T_A = 25^\circ\text{C}$

POWER SUPPLY CHANNEL	CH(0:7)	CH(8:15)
Manager	½ LTC2980	½ LTC2980
Nominal Untrimmed Output Voltages	1.0V, 1.1V, 1.2V, 1.3V, 1.4V, 1.5V, 1.7V, 1.8V	2.0V, 2.2V, 2.5V, 2.7V, 3.0V, 3.1V, 3.2V, 3.3V
Rated Output Current	0.3A	0.3A
Default Margin Range	±5%	±5%
Output Trim Range ($V_{FS_VDAC} = 1.38\text{V}$)	+13/−19%	+11/−15%
Temperature	1 Internal	11 Internal

Common Characteristics – Specifications Valid Over Full Operating Temperature Range

PARAMETER	CONDITIONS	VALUE			UNITS
		MIN	TYP	MAX	
Supply Input Voltage Range		6		14	V
ADC Total Unadjusted Error	$V_{IN_ADC} \geq 1\text{V}$			±0.25	%
ADC Voltage Sensing Input Range	Differential Voltage: $V_{IN_ADC} = (V_{SENSE[n]} - V_{SENSE[n]})$	0		6	V

GLOSSARY OF TERMS

The following list contains terms used throughout the document.

Channel – The collection of functions that monitor, supervise, and trim a given power supply rail.

EEPROM – Nonvolatile memory (NVM) storage used to retain data after power is removed.

Margin – Term used typically in board level testing that increases/decreases the output voltage to look for sensitivity/marginality problems

Monitor – The act of measuring voltage, current, and temperature readings.

NVM – Nonvolatile memory, see EEPROM.

PMBus – An industry standard power-management protocol with a fully defined command language that facilitates communication with power converters and other devices in a power system.

Rail – The final output voltage that the power supply controller manages.

Supervise – The act of quickly responding to a voltage, current, temperature condition that is compared to pre-programmed values (fault settings).

Trim – The act of adjusting the final output voltage. A servo loop is typically used to trim the voltage.

LTpowerPlay GUI SOFTWARE

LTpowerPlay is a powerful Windows-based development environment that supports Analog Devices Power System Management ICs with EEPROM, including the LTC2980 16-channel PMBus Power System Manager. The software supports a variety of different tasks. You can use LTpowerPlay to evaluate Analog Devices ICs by connecting to a demo board system. LTpowerPlay can also be used in an offline mode (with no hardware present) in order to build a multi-chip configuration file that can be saved and re-loaded at a later time. LTpowerPlay provides unprecedented diagnostic and debug features. It becomes a valuable diagnostic tool during board bring-up to program or tweak the power management scheme in

a system or to diagnose power issues when bringing up rails. LTpowerPlay utilizes the DC1613 I²C/SMBus/PMBus Controller to communicate with one of many potential targets, including the DC2198A demo system or a customer board. The software also provides an automatic update feature to keep the software current with the latest set of device drivers and documentation. The LTpowerPlay software can be downloaded.

To access technical support documents for ADI Power System Management Products visit “Help, View Online help” on the LTpowerPlay menu.

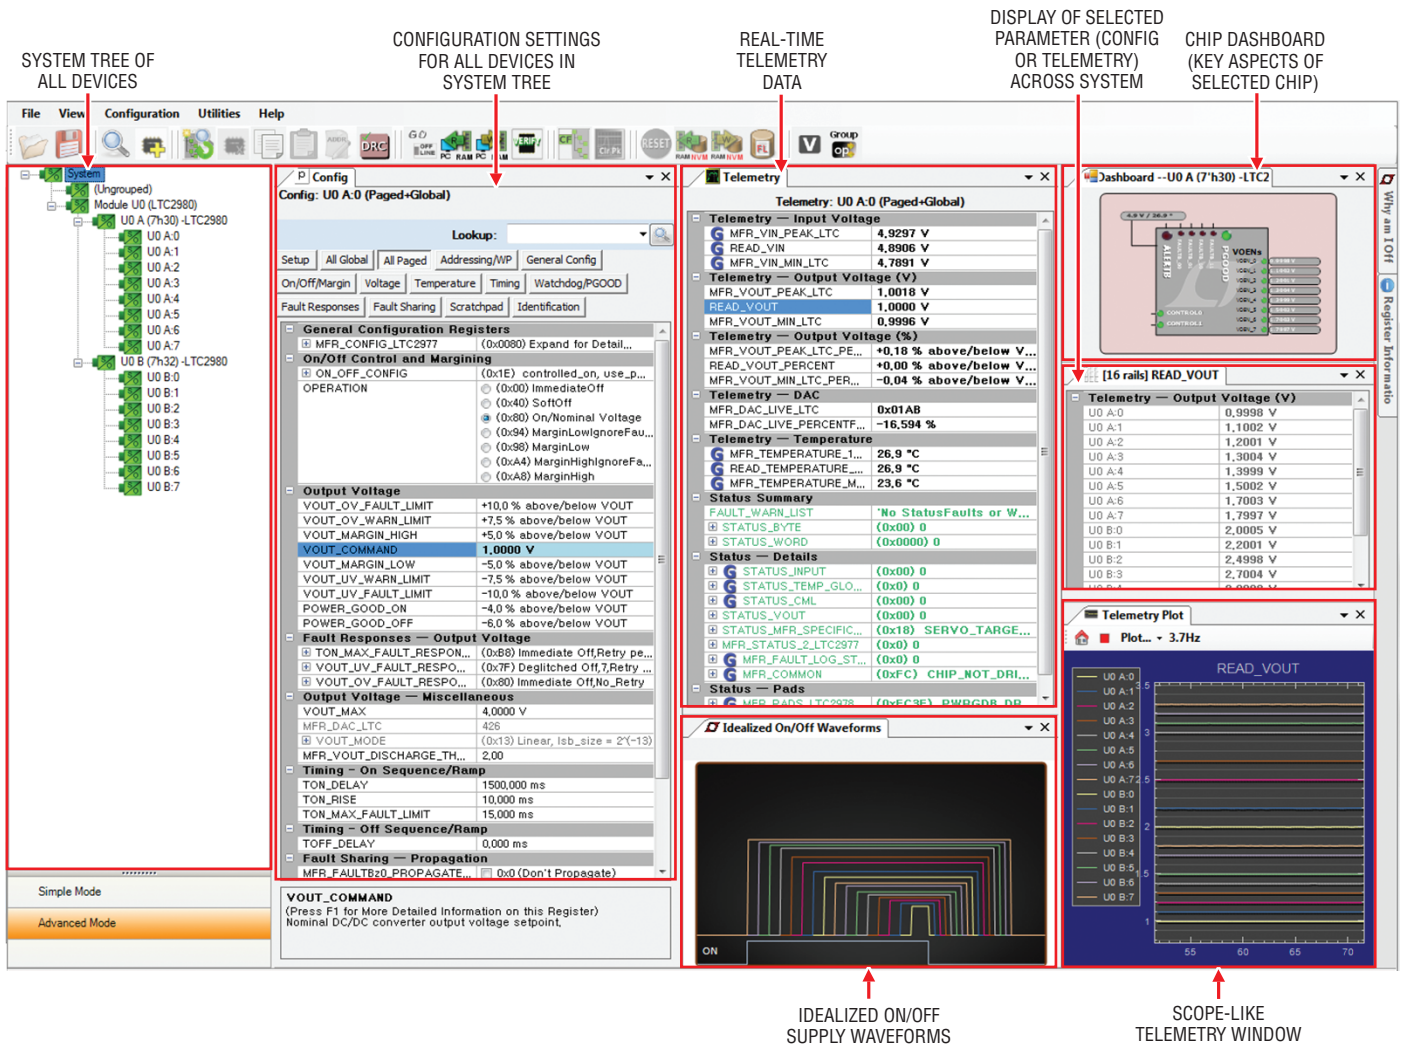


Figure 1. Screen Shot of the LTpowerPlay GUI


DEMO MANUAL DC2198A

QUICK START PROCEDURE

The following procedure describes how to set up a DC2198A demo system.

1. Download and install the [LTpowerPlay](#) GUI.
2. Remove the board from the ESD protective bag and place it on a level surface. Connect the DC1613 I²C/SMBus/PMBus Controller to the DC2198A board using the 12-pin ribbon cable.
3. Confirm that the CONTROL switch is set to the RUN position.
4. Plug the USB to I²C/SMBus/PMBus Controller into a USB port on your PC. The board should power up with all power good LEDs and +5V LED illuminated green. The USB-to-I²C/SMBus/PMBus Controller supplies ~100mA of current which should be sufficient for a single demo board.
5. If multiple boards are being powered, connect a +12VDC power supply with >0.5A capacity to the V_{IN} input jack of the DC2198A.
6. Launch the LTpowerPlay GUI.

- a. The GUI automatically identifies the DC2198A and builds a system tree. The system tree on the left hand side should look like this:

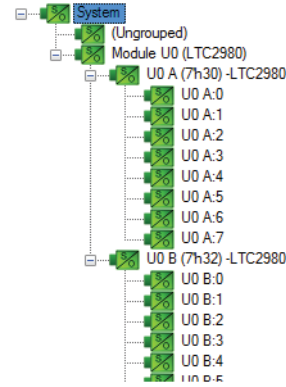


Note: For multiple board arrays, the GUI automatically ensures each device has a unique address. In this scenario, it is recommended at this point to store these addresses to NVM (EEPROM) by clicking the “RAM->NVM” icon in the toolbar.




Figure 2. Connecting DC2198A Board and the DC1613 I²C/SMBus/PMBus Controller

QUICK START PROCEDURE

- b. A green message box will be displayed for a few seconds in the lower left hand corner confirming that the DC2198A is communicating:

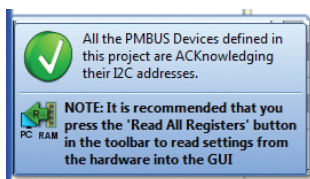

- c. Save the demo board configuration to a (*.proj) file by clicking the "Save" icon. This creates a backup file. Name it whatever you want.

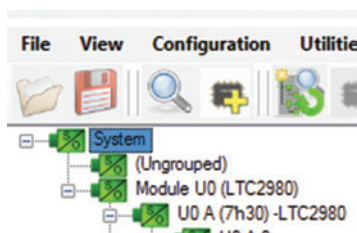

7. The CONTROL switch is configured to control all 16 channels. Slide the switch to RUN to enable, OFF to disable all channels. For multiple board arrays, the CONTROL switch is wired to a signal that is common across all boards. All CONTROL switches must be set to the RUN position to enable all boards.

Loading a DC2198A Configuration (*.proj) File with the GUI

1. In the upper left hand corner of the GUI, File > Open > browse to your *.proj file. This will load the file into the GUI.



2. Click on the "Go Online" icon, then click on the "PC -> RAM" arrow. This loads the configuration into the working RAM of the LTC2980.



3. To store the configuration to NVM (EEPROM), click on the "RAM -> NVM" icon.



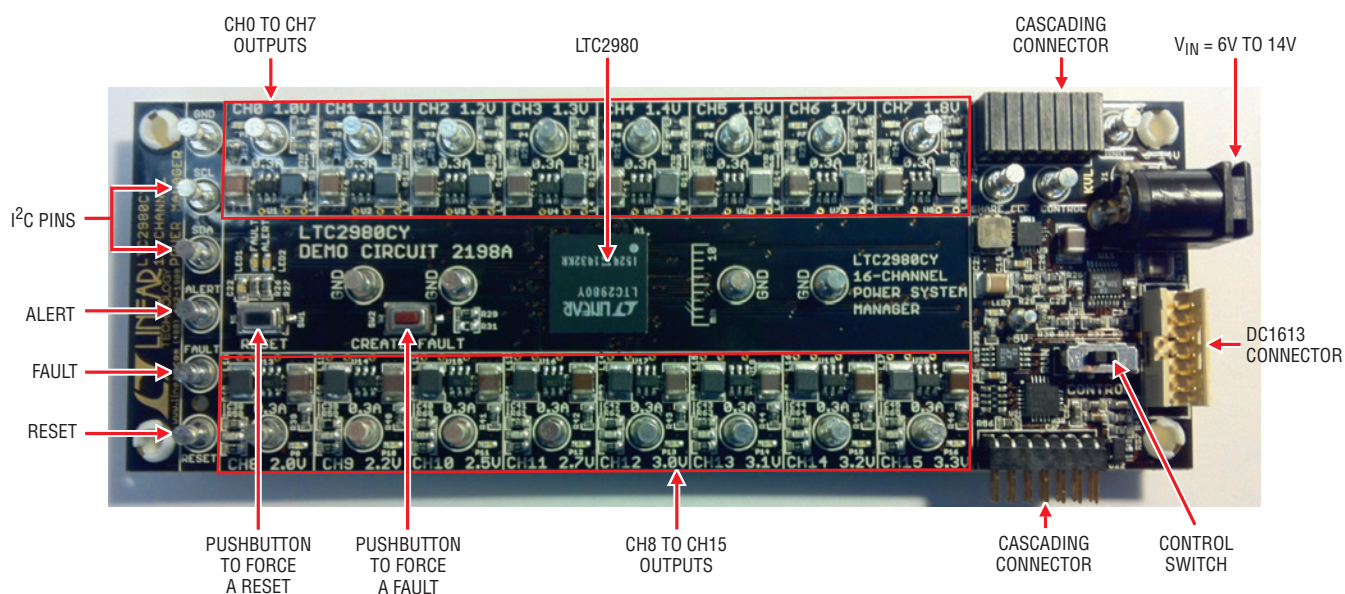


Figure 3. DC2198A Top Side Details


COMMON DEMO BOARD OPERATIONS

MARGIN ALL RAILS

The LTC2980 power system manager not only monitors each of the sixteen outputs but also can margin the outputs either high or low. Margining is the operation that moves a rail either up or down for testing purposes. It allows a system to be fully characterized over supply limits without the use of external hardware or resources. The GUI provides an easy way to margin all rails high or all low by clicking one of four buttons. To invoke the margining dialog, click the GroupOp icon in the toolbar. The buttons labeled “ignore faults” will margin without creating a fault even if the fault limits are exceeded.

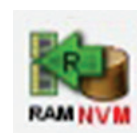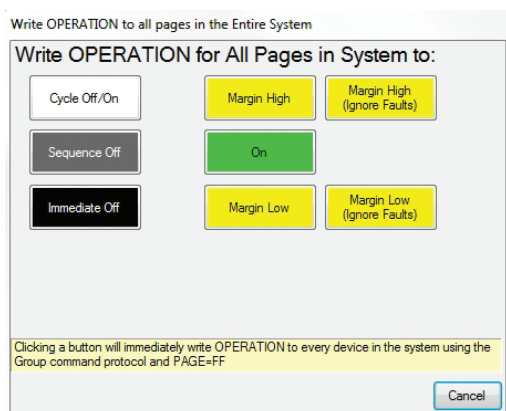


A look at the telemetry window shows the effect of the margin high or margin low operation. The following screen shot shows all rails going from nominal setpoints to margin high, margin low, and back to nominal voltages.

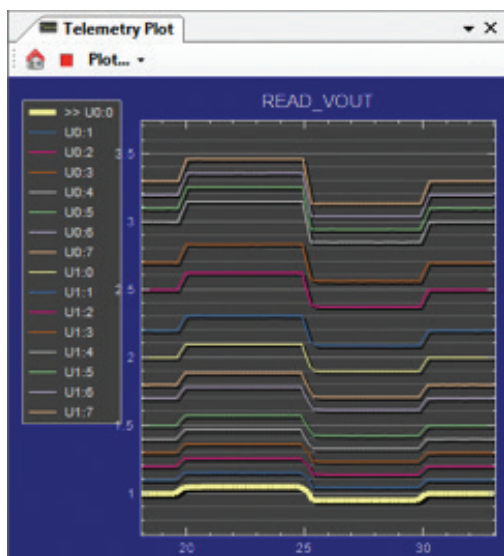

Each LTC2977 inside the LTC2980 has a multiplexed ADC that is used to provide voltage, current, and temperature readback values. The telemetry plot in the GUI is similar to a multichannel oscilloscope which is capable of displaying any parameter that is displayed in the telemetry window. Due to the nature of a multiplexed ADC converter, it has an associated ADC loop time. The total ADC loop time (~100ms to 160ms) for a given channel is dependent on the device’s configuration. Refer to the LTC2977 data sheet for complete ADC timing specifications.

Creating a Fault

There is a pushbutton on the DC2198A board that is used to force a fault and demonstrate the demo board’s ability to detect it and respond according to the configuration. When depressed, the pushbutton creates a fault on channel 10, the 2.5V output (GUI channel U1:2). The user should see all outputs power off, the fault LED momentarily illuminate, the alert LED illuminate continuously, and all rails sequence back on after a retry period. The user may also short any power supply output indefinitely. This is a good way to induce UV faults and shows that a shorted channel will not be damaged. Use a jumper wire or a coin to short any output.

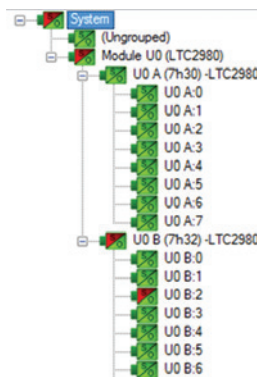

The LTC2980 has a feature, which allows it to sequence its channels off in a controlled manner, as opposed to turning all rails off immediately. The SequenceOffOnFault bit in the MFR_CONFIG_LTC2977 register sets this behavior on each channel. The DC2198A demo board has been configured to sequence off all channels when a fault occurs. Pressing the “CREATE FAULT” pushbutton causes the

COMMON DEMO BOARD OPERATIONS

Fault pin to be asserted low which triggers all rails to power down based on the TOFF_DELAY times.

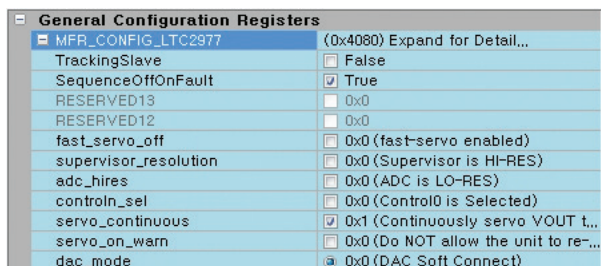


Figure 4 shows FAULTB asserting low, and each of the channels sequencing off per the TOFF_DELAY settings. Figure 5 shows the same except that the 3.0V rail (CH12) does not have its SequenceOffOnFault bit set. The 3.0V rail powers down immediately as defined by the fault response setting.

Clearing a Fault

To clear a fault, the user may click the CF icon in the GUI or simply push the RESET pushbutton on the demo board. In both cases, the red (+) on the CF icon and alert LED on the board will be cleared. You will notice that all rails are automatically re-enabled after a programmable retry period. The alert LED may be cleared by pushing the Clear Faults (CF) icon in the GUI.



After clearing faults, the system tree may remain “yellow” if any nonvolatile fault logs are present. For further information, see the Working with the Fault Log section.

Resetting the DC2198A

A reset pushbutton is provided on the board. To reset all devices on the DC2198A board and reload the EEPROM contents into operating memory (RAM), press RESET (SW2) on the DC2198A.

DC2198A LEDs

Each individual channel on DC2198A also has its own green “power good” LED (CH0 through CH15). When USB power (DC1613 Controller) or external power (6V-14V jack) is applied, the +5V green LED will illuminate, indicating that the LTC2980 is powered. The red LEDs will illuminate when an alert or a fault has occurred.

Sequencing Output Channels

The LTC2980 has been pre-programmed to different TON_DELAY values for each channel. The TON_DELAY parameter is applied to each device relative to its respective CONTROL pin. When multiple demo boards are connected together, all CONTROL pins are wire OR'd. Therefore the TON delays are enforced relative to one

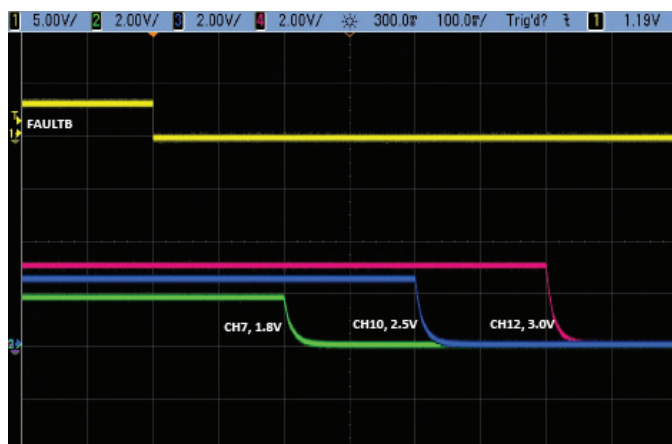


Figure 4. Sequencing Off (SeqOffOnFault = 1)

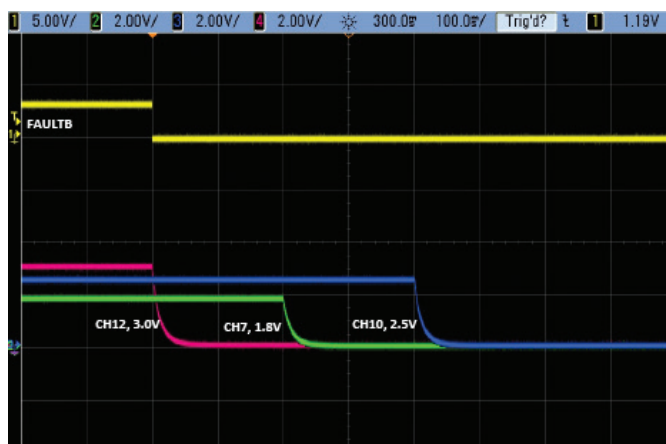


Figure 5. Sequencing Off (SeqOffOnFault = 0)

COMMON DEMO BOARD OPERATIONS

edge. The same applies to TOFF_DELAY values. When the CONTROL switch is set to the OFF position, all rails will power down sequentially based on each of the device's TOFF_DELAY values. Figure 6 shows an oscilloscope screen capture of three output rails sequencing up and down in response to the CONTROL pin.

Each channel has an LED, which visually indicates if the channel has power. When the CONTROL pin is switched on and off, you will observe the relative on/off timing of the 16 channels.

For the LTC2980, the TON_DELAY and TOFF_DELAY values extend to 13.1 seconds, providing very long on and off sequencing of power supply rails.

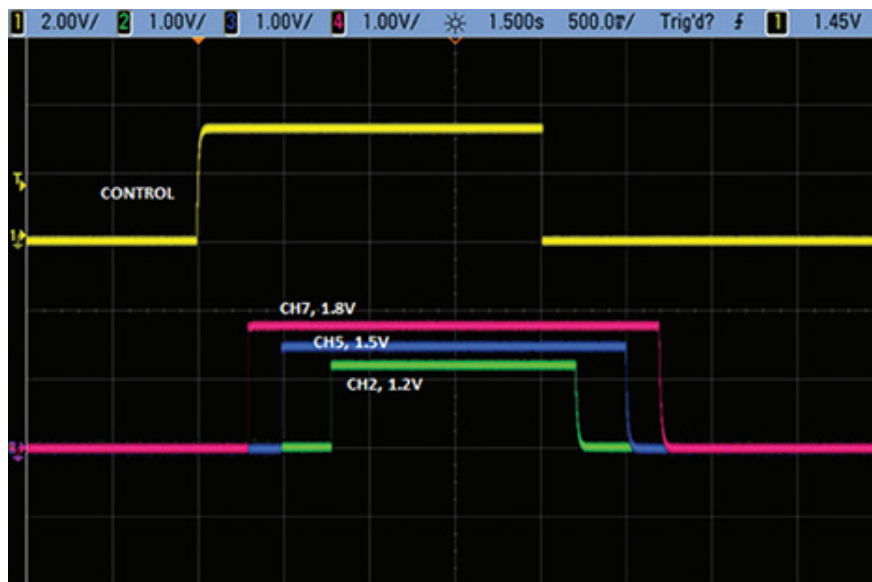


Figure 6. Sequencing Output Channels with DC2198A Using TON_DELAY and TOFF_DELAY

[16 rails] TON_DELAY	
Timing - On Sequence/Ramp	
U0 A:0	1500,000 ms
U0 A:1	1400,000 ms
U0 A:2	1300,000 ms
U0 A:3	1200,000 ms
U0 A:4	1100,000 ms
U0 A:5	1000,000 ms
U0 A:6	900,000 ms
U0 A:7	800,000 ms
U0 B:0	700,000 ms
U0 B:1	600,000 ms
U0 B:2	500,000 ms
U0 B:3	400,000 ms
IIN R:4	300,000 ms

Figure 7. TON_DELAY Configuration

[16 rails] TOFF_DELAY	
Timing - Off Sequence/Ramp	
U0 A:0	0,000 ms
U0 A:1	50,000 ms
U0 A:2	100,000 ms
U0 A:3	150,000 ms
U0 A:4	200,000 ms
U0 A:5	250,000 ms
U0 A:6	300,000 ms
U0 A:7	350,000 ms
U0 B:0	400,000 ms
U0 B:1	450,000 ms
U0 B:2	500,000 ms
U0 B:3	550,000 ms
IIN R:4	600,000 ms

Figure 8. TOFF_DELAY Configuration

COMMON DEMO BOARD OPERATIONS

Why Am I Off? Tool

Use the Why am I Off tool in the LTpowerPlay GUI to diagnose the reason a power supply channel is turned

off. The tool can be located in the top right corner of the GUI, next to the “Register Information” tab. Hover your cursor over this tab to show the tool.

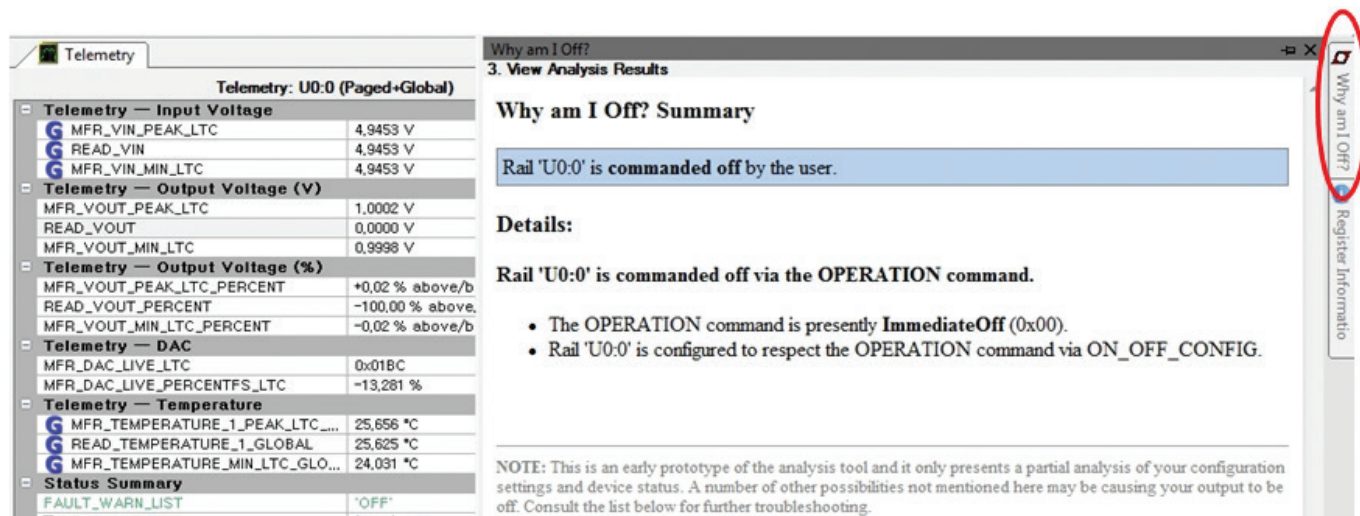


Figure 9. Why Am I Off Tool in the LTpowerPlay GUI

ADVANCED DEMO BOARD OPERATIONS

WHAT IS A FAULT LOG?


A fault log is a nonvolatile record of the power system leading up to the time of fault. It holds the most recent monitored values (uptime, voltage, current, temperature) that can be analyzed to help determine the cause of the fault. It is a powerful diagnostic feature of the LTC2980 on the DC2198A demo board.

Create a Fault and Fault Log


To create a fault log, you must create a fault, as described in the Creating A Fault section. If multiple boards are configured, select the appropriate device in the system tree by clicking on the appropriate LTC2980 chip. We will proceed to work with the fault log.

Working with the Fault Log

Once a fault has occurred, the Fault Log (FL) icon will show a red (+) sign on it, indicating that the GUI has detected a fault log in the device. Clicking the icon will bring up a dialog box. Note that it is context sensitive. Be sure that the desired device is selected in the system tree.

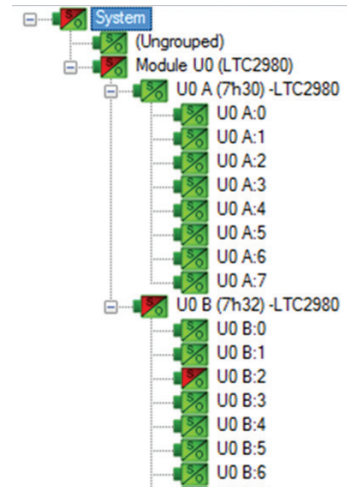

Notice that the checkbox “Log to EEPROM on Fault” is checked. Once a fault occurs, the device will automatically write the fault log data to EEPROM (NVM). At this point, the log is locked and will not change until it is cleared by the user. To read the EEPROM log data, first click the “NVM -> RAM” button. At this point the RAM Log is locked and not updated even though the telemetry readings continue. Click the “Read RAM Log” button. The log data will appear in the text box below.

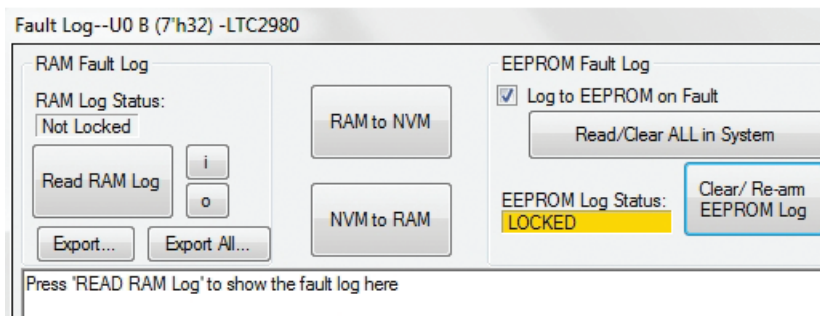

ADVANCED DEMO BOARD OPERATIONS


The log contains timestamp, up time, channel voltage readings, an input voltage reading, an on-chip temperature reading, etc. There will be a number of loops; each loop contains data obtained in one ADC loop time with the most recent ADC loop data on top and the oldest data at the bottom of the log. The up time indicates, at the time of fault, the amount of time the device has been powered up or time since the previous reset.

In this case, the fault log will show that channel U1:2 faulted due to a VOUT_UV_FAULT condition. On the previous telemetry loop, the channel voltage reading was a nominal value (2.5V).

To clear the fault log, click the “Clear/Rearm EEPROM Log” button. This allows the selected device to be ready for a new fault event. To clear all faults, click the Clear Faults (CF) icon.

Fault Sharing Setup in the GUI


Fault sharing provides a means of propagating a fault detected by a power system manager to other power system managers via FAULT pins. Use the Fault Sharing Setup Tool to configure the fault sharing in the GUI. Select the LTC2980 labeled U0 in the system tree. Go to Utilities > Fault Sharing Diagram. For more details on this topic, please refer to the Fault Management section in the data sheet.

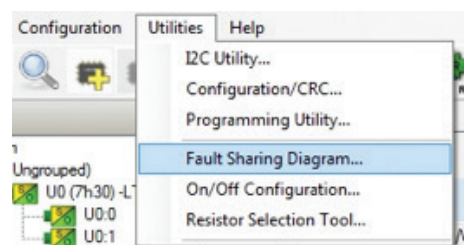

The fault-sharing dialog will appear as shown in Figure 10. All Response and all Propagate switches are closed by default. In this configuration, a fault on one of the LTC2980 channels will shut down all 16 channels, and a fault on any LTC2980 channel will propagate to all channels on the DC2198A demo board since the fault pins are tied together.

Note: All FAULT pins on the LTC2980 are tied together on the DC2198A demo board. These pins are open drain and have a common pull-up resistor to provide a logic high level (inactive). All FAULT pins are active low.

There are two types of actions to fault conditions: How a channel responds to another channel’s fault and whether a particular channel propagates a fault to other channels. FAULT pins are bi-directional, meaning the device may drive its fault pin low (output) or may respond to the fault pin when another device drives it low (input). Because all fault pins are wire OR’d on the DC2198A, this hardware configuration allows one to program each device’s fault settings on a channel-by-channel basis. By default, the LTC2980 is configured to shut down all channels if other devices fault and to broadcast its own fault via the FAULT

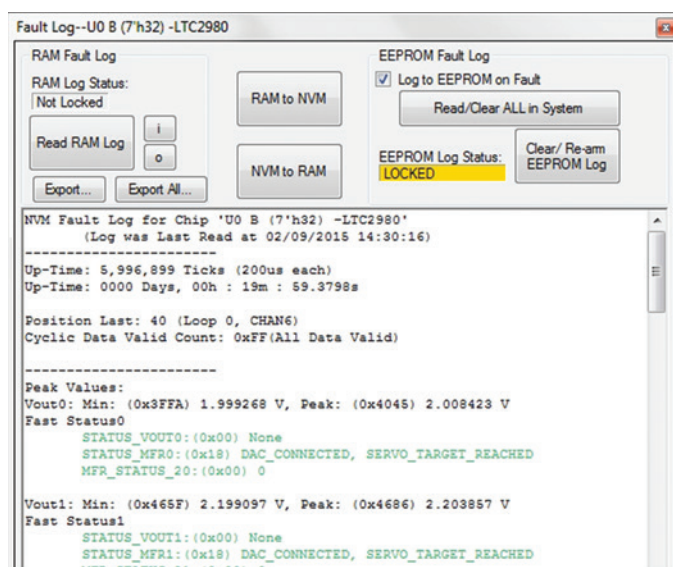

ADVANCED DEMO BOARD OPERATIONS

pins. A fault on these channels will cause only that channel to fault off. You can think of the “Response” switches as “shut this channel down when another channel faults”, and the “Propagate” switches as “drive a fault pin to broadcast to other channels that this channel faulted”.

Fault Configuration Example

Let’s explore two different examples. Suppose we do not want channel U0:0 (CH0 1.0V rail) to propagate its fault to the other channels when it faults. And suppose we do not want channel U0:1 (CH1 1.1V rail) to shut down in response to another channel’s fault. We can configure the switches as shown in Figure 11. Simply click the switches to open/close. Click OK to close the dialog box. Click the “PC -> RAM” icon to write the changes to the DC2198A.



We can now create a fault on U0:0 (CH0) by shorting the output to ground. You may use a coin or a jumper to temporarily connect CH0 to the GND turret. You will notice that the channel shuts off but the other channels remain powered up because its fault is not propagated to the other channels. After the retry period, channel U0:0 (CH0) will power back up. We can now observe the effect of changing the response setting on U0:1 (CH1). If you short U0:2 (CH2 1.2V rail) to ground, notice that all rails shut down except U0:1 (CH1). This is an example of a keep-alive channel that remains powered up independent of faults on other channels.

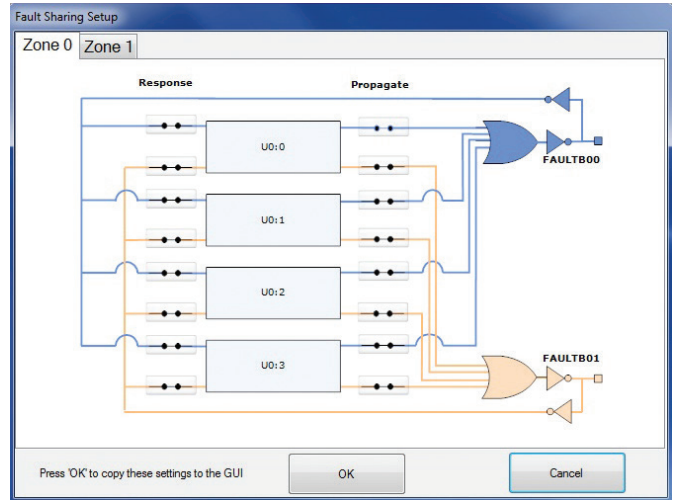


Figure 10. Fault Sharing Utility in LTpowerPlay GUI

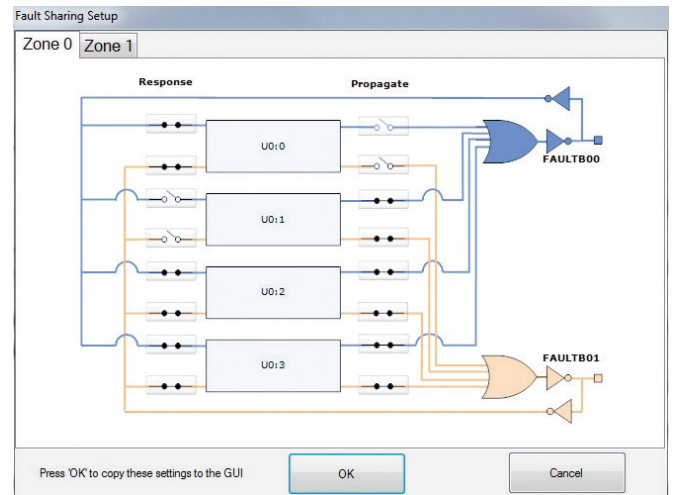



Figure 11. Updated Fault Sharing Configuration


SETUP PROCEDURE FOR MULTI-BOARD ARRAYS

Multiple DC2198A boards can be combined to control up to 64 independent power supplies. Four boards may be cascaded. The number of boards is limited by an I/O expander chip that has three address pins, allowing 8 different combinations. This setup demonstrates the coordinated fault responses and accurate time base shared across multiple LTC2980 devices.

Procedure:

1. Stack the boards side-by-side by plugging JP1 of one board into JP2 of another DC2198A board.
2. Ensure different slave address settings for each of the boards. The address of each board is set by the DIP switch JP3 on the backside of the board. The setting must be unique for each board in the array.
3. Plug in the +12V_{IN} power into one of the boards as shown in Figure 12. Only one +12V power source is allowed.

4. The USB to I²C/SMBus/PMBus Controller may be plugged into any board. If no devices show up in the GUI, click the magnifying glass icon  to enumerate the I²C bus and find the addresses of the parts. Go to step #2 to ensure that each board has a unique DIP switch setting.
5. Since the individual CONTROL lines are connected across the boards (CTRL is a common signal across all boards in the array), make sure that all CONTROL switches are set to the RUN position.
6. Re-launch LTpowerPlay. It will enumerate the entire board array and build a representative system tree and read all hardware settings into the GUI.

ATTENTION: Once the GUI has launched, click the “RAM -> NVM” icon in the toolbar  to ensure that the slave addresses are retained after a power off or reset. Otherwise you may lose communication with the slaves after a power cycle or reset event.

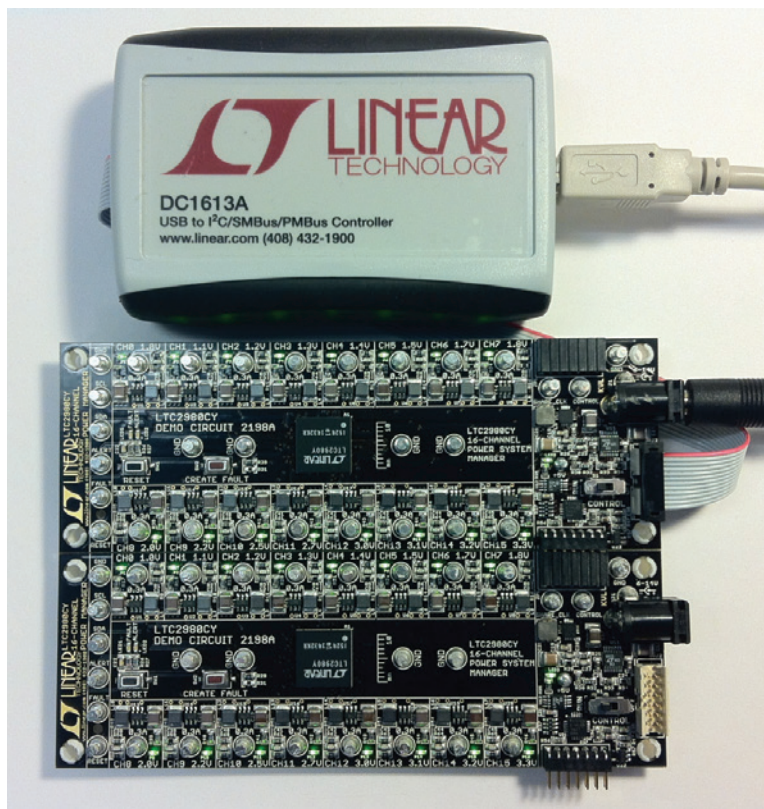


Figure 12. Array of Multiple DC2198A Demo Boards

SETUP PROCEDURE FOR MULTI-BOARD ARRAYS

Ensuring Slave Addresses Do Not Conflict

There is a small DIP switch on the backside of the DC2198A. It is used to set the slave address of an I/O expander which provides for the addition of multiple boards to a

setup. The I/O expander has a base address of 0x20. The DIP switch settings set the offset. The three switches that may be changed are labeled A0, A1, A2. Examples below set the boards to addresses 0x20 and 0x27.

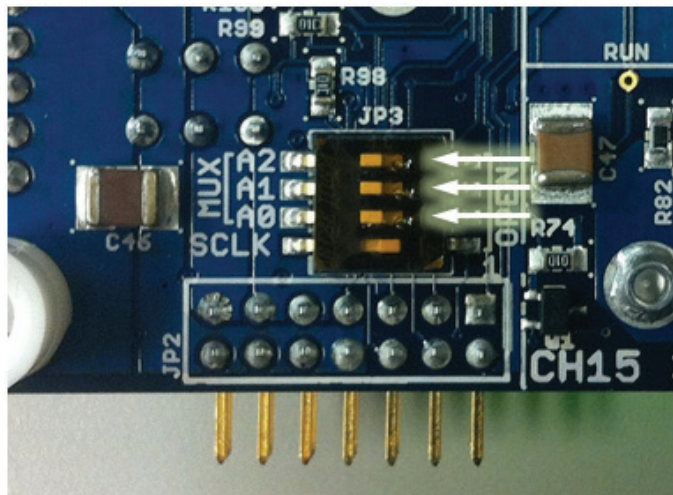


Figure 13. DIP Switch Set to All Zeros (0x20)

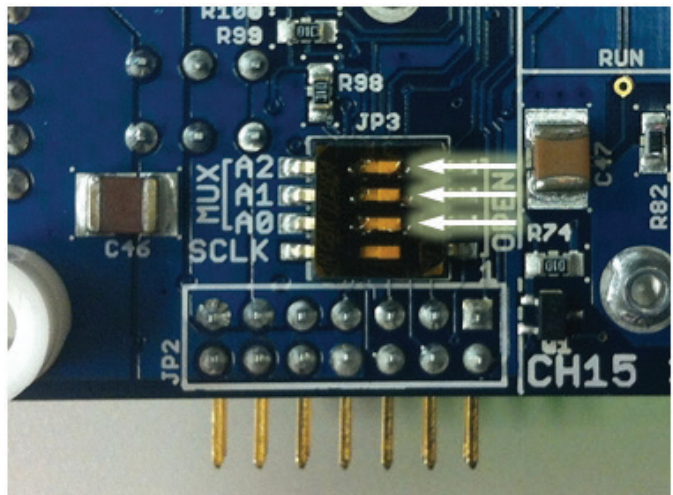


Figure 14. DIP Switch Set to All Ones (0x27)

DC2198A DETAILS – TOP


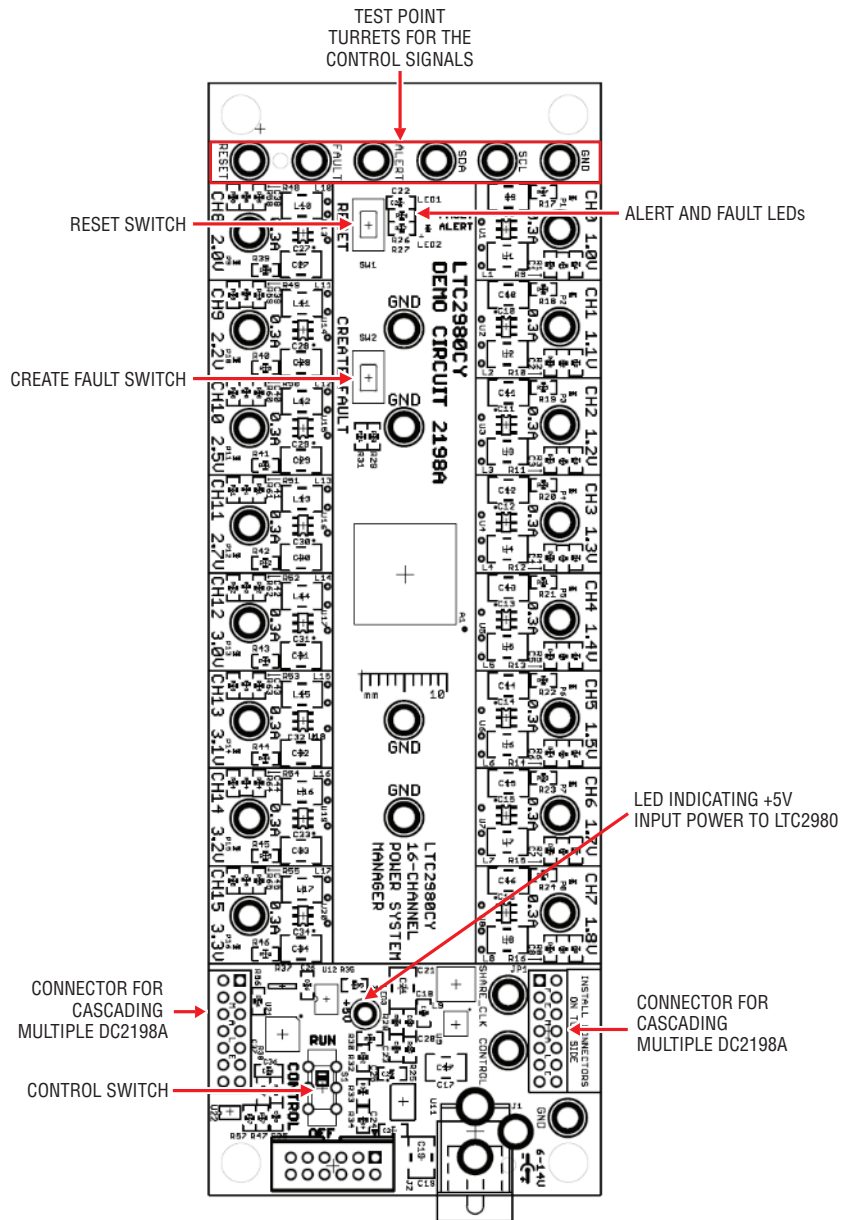


Table 1. DC2198A: Default Switch Configuration (Default Position Shown in Grey in the Figure Above)

REFERENCE DESIGNATOR	SIGNAL NAME	USAGE	DEFAULT
JP3	SCLK, A0, A1, A2	DIP Switch Used to Set the Address Offset of LTC2980	OPEN
S1	CONTROL0	Switch Used to Enable/Disable the CONTROL0 Input Pin of LTC2980	RUN

DC2198A DETAILS – BOTTOM

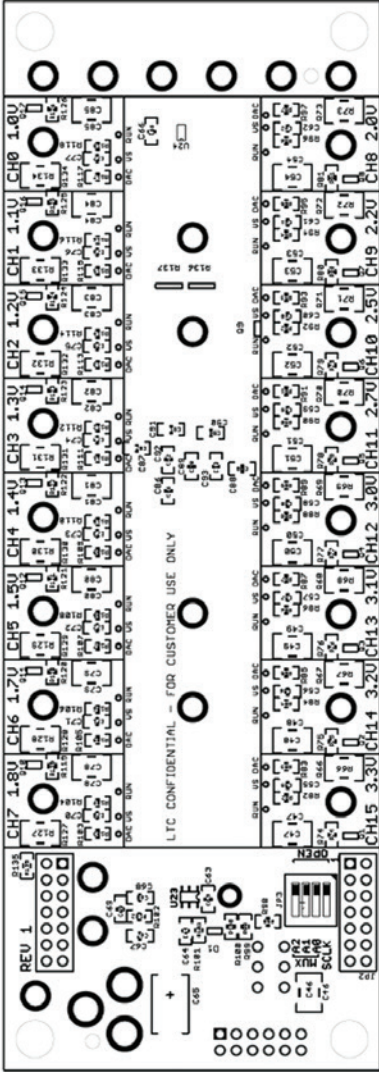

PARTS LIST

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
Required Circuit Components				
1	1	U10	IC 16-CH POWER SYSTEM MANAGER BGA144	ANALOG DEVICES: LTC2980CY#PBF
Additional Demo Board Circuit Components				
2	16	C1, C2, C3, C4, C5, C6, C7, C8, C38, C39, C40, C41, C42, C43, C44, C45	CAP CER 220pF 50V 10% NPO 0603	NIC: NMC0603NPO221J50TRPF
3	18	C9, C10, C11, C12, C13, C14, C15, C16, C19, C27, C28, C29, C30, C31, C32, C33, C34, C46	CAP CER 10µF 10V 10% X5R 1210	KEMET: C1210C106K8PACTU
4	1	C17	CAP CER 10µF 25V 20% X5R 1210	TAIYO YUDEN: TMK325BJ106MM-T
5	26	C18, C26, C55, C56, C57, C58, C59, C60, C61, C62, C70, C71, C72, C73, C74, C75, C76, C77, C86, C87, C88, C89, C90, C91, C92, C93	CAP CER 0.1µF 16V 10% X7R 0603	NIC: NMC0603X7R104K16TRPF
6	2	C20, C69	CAP CER 68pF 50V 5% NPO 0603	AVX: 06035A680JAT2A
7	17	C21, C47, C48, C49, C50, C51, C52, C53, C54, C78, C79, C80, C81, C82, C83, C84, C85	CAP CER 22µF 10V 10% X5R 1210	KEMET: C1210C226K8PACTU
8	1	C22	CAP CER 10nF 25V 10% X7R 0603	YAGEO: CC0603KRX7R8BB103
9	1	C23	CAP CER 47pF 50V 5% NPO 0603	AVX: 06035A470JAT2A
10	7	C24, C25, C35, C36, C37, C63, C66	CAP CER 1µF 16V 10% X7R 0603	TAIYO YUDEN: EMK107B7105KA-T
11	2	C64, C67	CAP CER 4.7µF 16V 10% X5R 0603	TDK: C1608X5R1C475K
12	1	C65	CAP TANT 47µF 16V 20% 7343	KEMET: T520D476M016ATE035
13	1	C68	CAP CER 4.7pF 50V NPO 0603	MURATA: GRM1885C1H4R7CZ01D
14	1	D1	DUAL DIODE SCHOTTKY 30V CC SOT-323-3	DIODES/ZETEX: SBR0330CW-7
15	16	L1, L2, L3, L4, L5, L6, L7, L8, L10, L11, L12, L13, L14, L15, L16, L17	INDUCTOR SHLD POWER 4.7µH SMD	ABRACON: ASPI-0315FS-4R7M-T2 WURTH: 744029004 (ALTERNATE)
16	1	L9	INDUCTOR POWER 2.2µH 2.85A SMD	VISHAY: IHLP1616BZER2R2M01
17	2	LED1, LED2	LED RED HI BRT SS TYPE LO CUR SM	PANASONIC: LNJ214R82RA
18	17	LED3, P1, P2, P3, P4, P5, P6, P7, P8, P9, P10, P11, P12, P13, P14, P15, P16	LED GREEN HIGH BRIGHT ESS SMD	PANASONIC: LNJ326W83RA
19	17	Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, Q10, Q11, Q12, Q13, Q14, Q15, Q16, Q17	MOSFET N-CH 30V 900mA SOT323-3	DIODES INC: DMG1012UW-7 -OR- VISHAY/ SILICONIX: SI1304BDL-T1-GE3
20	33	R1, R2, R3, R4, R5, R6, R7, R8, R29, R58, R59, R60, R61, R62, R63, R64, R65, R74, R75, R76, R77, R78, R79, R80, R81, R119, R120, R121, R122, R123, R124, R125, R126	RES 100kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07100KL
21	2	R9, R107	RES 402kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07402KL

DEMO MANUAL DC2198A

PARTS LIST

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
22	1	R10	RES 267kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07267KL
23	1	R11	RES 200kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07200KL
24	1	R12	RES 158kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07158KL
25	1	R13	RES 133kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07133KL
26	1	R14	RES 115kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07115KL
27	1	R15	RES 88.7kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0788K7L
28	1	R16	RES 80.6kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0780K6L
29	17	R17, R18, R19, R20, R21, R22, R23, R24, R35, R39, R40, R41, R42, R43, R44, R45, R46	RES 3.01kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-073K01L
30	10	R25, R32, R36, R47, R56, R57, R98, R99, R100, R135	RES 10.0kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0710KL
31	2	R26, R27	RES 698Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07698RL
32	2	R28, R102	RES 73.2kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0773K2L
33	1	R30	RES 46.4kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0746K4L
34	1	R31	RESISTOR 0603 OPTION	
35	2	R33, R38	RES 249Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07249RL
36	1	R34	RES 1.00kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-071KL
37	3	R37, R136, R137	RES ARRAY 10kΩ 4 RES 1206	VISHAY/DALE: CRA06S08310K0JTA
38	1	R48	RES 66.5kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0766K5L
39	1	R49	RES 57.6kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0757K6L
40	1	R50	RES 47.5kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0747K5L
41	1	R51	RES 42.2kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0742K2L
42	1	R52	RES 36.5kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0736K5L
43	1	R53	RES 34.8kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0734K8L
44	1	R54	RES 33.2kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0733K2L
45	1	R55	RES 32.4kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-0732K4L
46	16	R66, R67, R68, R69, R70, R71, R72, R73, R127, R128, R129, R130, R131, R132, R133, R134	RES 470Ω 1/4W 5% 1210 SMD	ROHM SEMICONDUCTOR: MCR25JZHJ471
47	16	R82, R84, R86, R88, R90, R92, R94, R96, R104, R106, R108, R110, R112, R114, R116, R118	RES 100Ω 1/10W 0603 SMD	
48	1	R83	RES 182kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07182KL
49	1	R85	RES 191kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07191KL
50	1	R87	RES 196kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07196KL
51	1	R89	RES 205kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07205KL
52	1	R91	RES 226kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07226KL
53	1	R93	RES 243kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07243KL
54	1	R95	RES 274kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07274KL
55	1	R97	RES 301kΩ 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07301KL

PARTS LIST


ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
56	1	R101	RES 2.49k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-072K49L
57	1	R103	RES 340k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07340KL
58	1	R105	RES 357k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07357KL
59	1	R109	RES 374k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07374KL
60	1	R111	RES 464k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07464KL
61	1	R113	RES 511k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07511KL
62	1	R115	RES 549k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07549KL
63	1	R117	RES 604k Ω 1/10W 1% 0603 SMD	YAGEO: RC0603FR-07604KL
64	16	U1, U2, U3, U4, U5, U6, U7, U8, U13, U14, U15, U16, U17, U18, U19, U20	IC BUCK SYNC ADJ 0.3A SOT23-6	ANALOG DEVICES: LTC3405AES6#TRMPBF
65	1	U9	IC BUCK SYNC 2.5A 16-QFN	ANALOG DEVICES: LTC3604IUD#PBF
66	1	U11	IC DUAL 4A DIODES 16-MSOP	ANALOG DEVICES: LTC4415IMSE#PBF
67	1	U12	IC 2-WIRE BUS BUFFER 8-MSOP	ANALOG DEVICES: LTC4313CMS8-2#PBF
68	1	U21	IC I/O EXPANDER I ² C 8B 20-QFN	MICROCHIP: MCP23008-E/ML
69	1	U22	IC EEPROM 2KBIT 400kHz SOT23-5	MICROCHIP TECHNOLOGY: 24AA02T-I/OT
70	1	U23	IC VREF SERIES PREC TSOT-23-6	ANALOG DEVICES: LT6654BMPS6-1.25#TRMPBF
71	1	U24	IC BUFFER DUAL NON-INV SC706	TI: SN74LVC2G34DCKR

Hardware – For Demo Board Only

72	1	J1	CONN PWR JACK 2.1X5.5mm HIGH CUR	CUI INC: PJ-002AH
73	1	J2	CONN HEADER 12POS 2mm STR DL PCB	FCI: 98414-G06-12ULF
74	1	JP1	CONN RECEPT 2mm DUAL R/A 14POS	SULLINS: NPPN072FJFN-RC
75	1	JP2	CONN HEADER 14POS 2mm R/A GOLD	MOLEX: 87760-1416
76	1	JP3	SWITCH DIP 4POS HALF PITCH SMD	C&K COMPONENTS: TDA04H0SB1
77	4	MH1, MH2, MH3, MH4	SPACER STACKING #4 SCREW NYLON	KEystone: 8831
78	1	S1	SW SLIDE DPDT 6VDC 0.3A PCMNT	C&K COMPONENTS: JS202011CQN
79	1	SW1	BLK SWITCH TACTILE SPST-NO 0.05A 12V	C&K COMPONENTS: PTS635SL25SMTR LFS
80	1	SW2	RED SWITCH TACTILE SPST-NO 0.05A 12V	C&K COMPONENTS: PTS635SK25SMTR LFS
81	29	TP1, TP2, TP3, TP4, TP5, TP6, TP7, TP8, TP9, TP10, TP11, TP12, TP13, TP14, TP15, TP16, TP17, TP18, TP19, TP21, TP22, TP23, TP24, TP25, TP26, TP27, TP28, TP29, TP30	TERM SOLDER TURRET 0.219" H 0.109" L	MILL-MAX: 2501-2-00-80-00-00-07-0
82	1	TP20	TERM SOLDER TURRET 0.156" H 0.084" L	MILL-MAX: 2308-2-00-80-00-00-07-0

DEMO MANUAL DC2198A

SCHEMATIC DIAGRAM

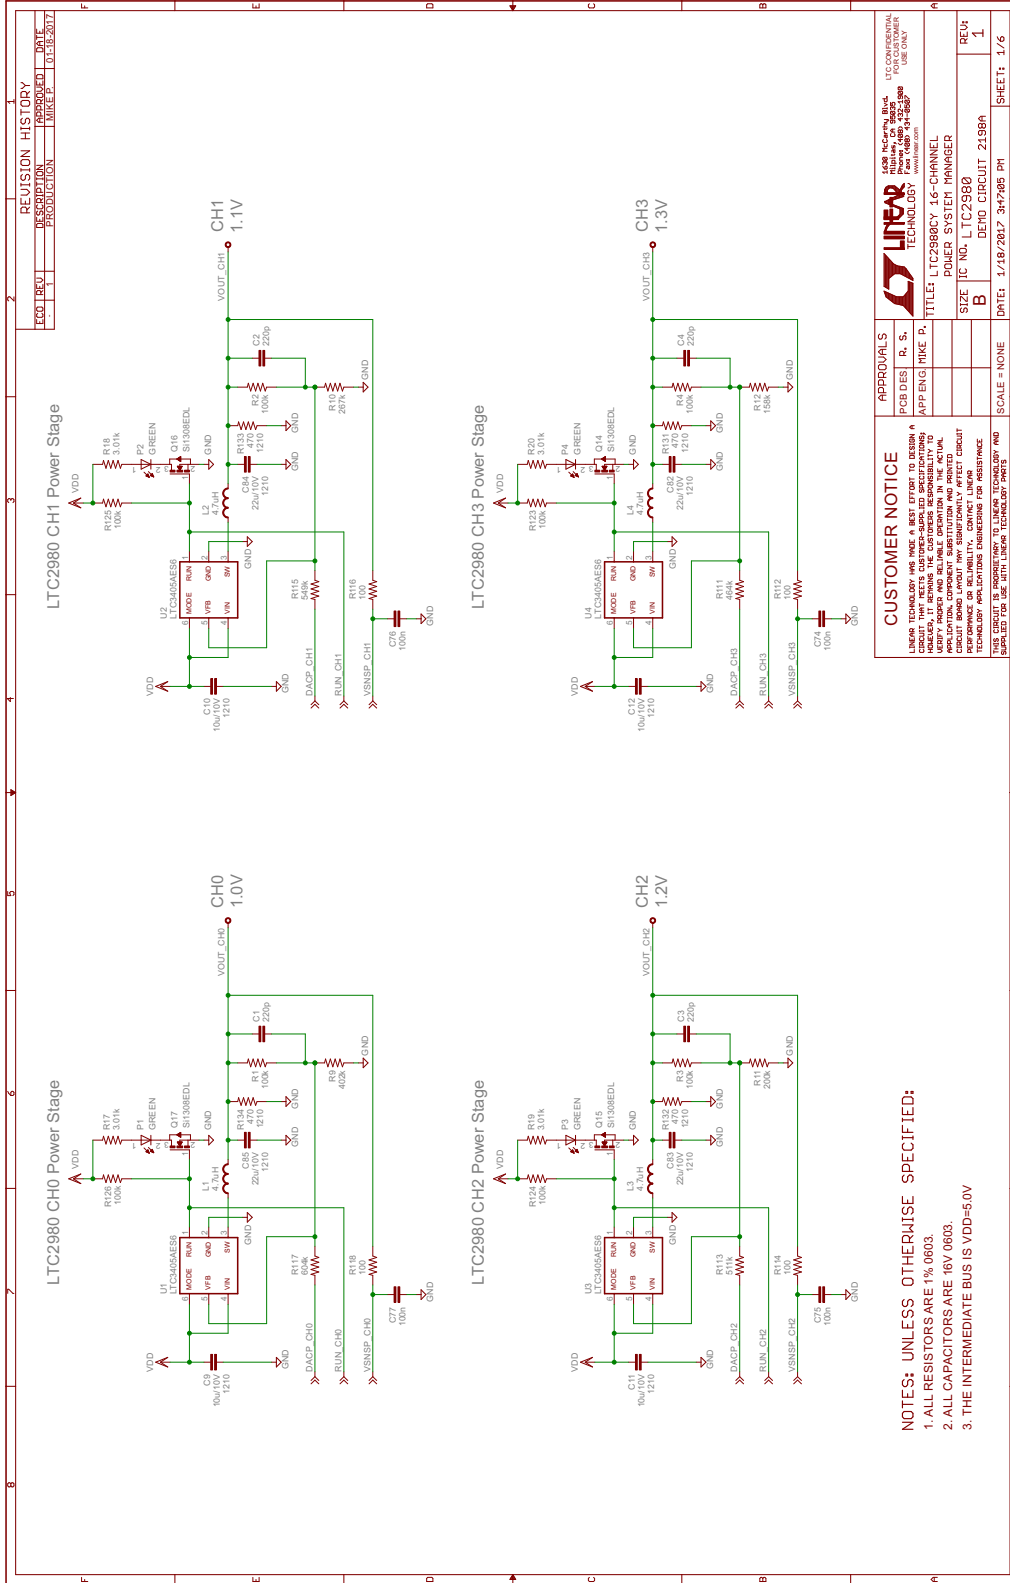


NOTES: UNLESS OTHERWISE SPECIFIED:
 1. ALL RESISTORS ARE 1% 0603.
 2. ALL CAPACITORS ARE 16V 0603.
 3. THE INTERMEDIATE BUS IS VDD=5.0V

REVISION HISTORY	
ECO:1	REV: 1.1
DESCRIPTION:	APPROVED
DATE:	03/26/2010

CUSTOMER NOTICE	
LTC2980 TECHNOLOGY HAS MADE A BEST EFFORT TO DESIGN A CIRCUIT THAT MEETS CUSTOMER-SPECIFIED SPECIFICATIONS. HOWEVER, THE ACTUAL PERFORMANCE OF THE CIRCUIT MAY VARY FROM THE SPECIFICATIONS DUE TO MANUFACTURING TOLERANCES AND OTHER FACTORS. CUSTOMERS SHOULD CONSULT WITH LTI FOR ASSISTANCE IN DESIGNING A CIRCUIT THAT MEETS THEIR SPECIFIC REQUIREMENTS.	

APPROVALS	
POB DES: R. S.	DATE: 1/19/2012 3:47:08 PM
APP ENG: MIKE P.	SCALE: NONE
TITLE: LTC2980CY 16-CHANNEL POWER SYSTEM DRIVER	SHEET: 1/6
SIZE: IC NO. LTC2980	REV: 1
DRAWN: DEMO CIRCUIT 2198A	

SCHEMATIC DIAGRAM

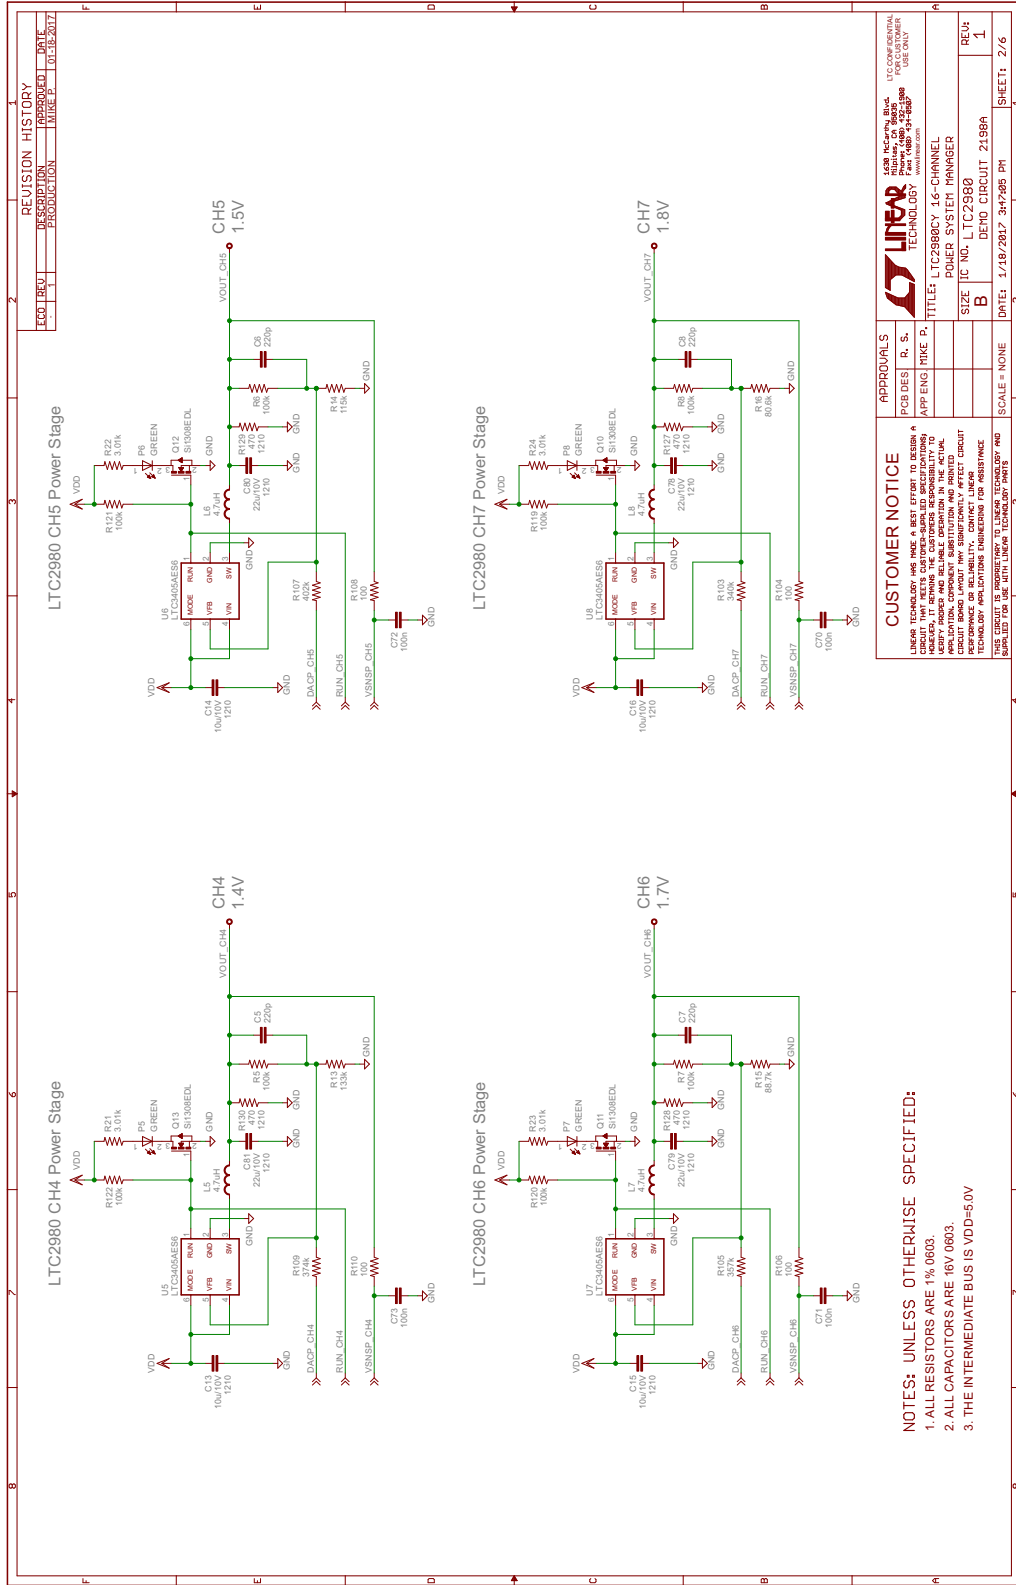

REVISION HISTORY	
DESCRIPTION	DATE
APPROVED	01-18-2017
PRODUCTION	


APPROVALS	R. S.
PCB DES	HWK P.
APP ENG	HWK P.

<p>CUSTOMER NOTICE</p> <p>THIS CIRCUIT IS PROPRIETARY TO LINEAR TECHNOLOGY AND SHOULD NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. LINEAR TECHNOLOGY ASSUMES NO RESPONSIBILITY FOR ANY DAMAGE TO PERSONS OR PROPERTY ARISING FROM THE USE OF THIS CIRCUIT. CONTACT LINEAR TECHNOLOGY APPLICATION ENGINEERING FOR ASSISTANCE.</p>	
<p>LINEAR TECHNOLOGY</p> <p>LINEAR TECHNOLOGY, INC.</p> <p>POWER SYSTEM MANAGER</p>	<p>DATE: 1/18/2017 3:47:28 PM</p>
<p>TITLE: LTC2980 16-CHANNEL</p>	<p>SCALE: NONE</p>
<p>SIZE: IC NO. LTC2980</p>	<p>REV: 1</p>
<p>DATE: 1/18/2017 3:47:28 PM</p>	<p>SHEET: 2/6</p>

- NOTES: UNLESS OTHERWISE SPECIFIED:**
1. ALL RESISTORS ARE 1% 0603.
 2. ALL CAPACITORS ARE 16V 0603.
 3. THE INTERMEDIATE BUS IS VDD=5.0V

DEMO MANUAL DC2198A

SCHEMATIC DIAGRAM

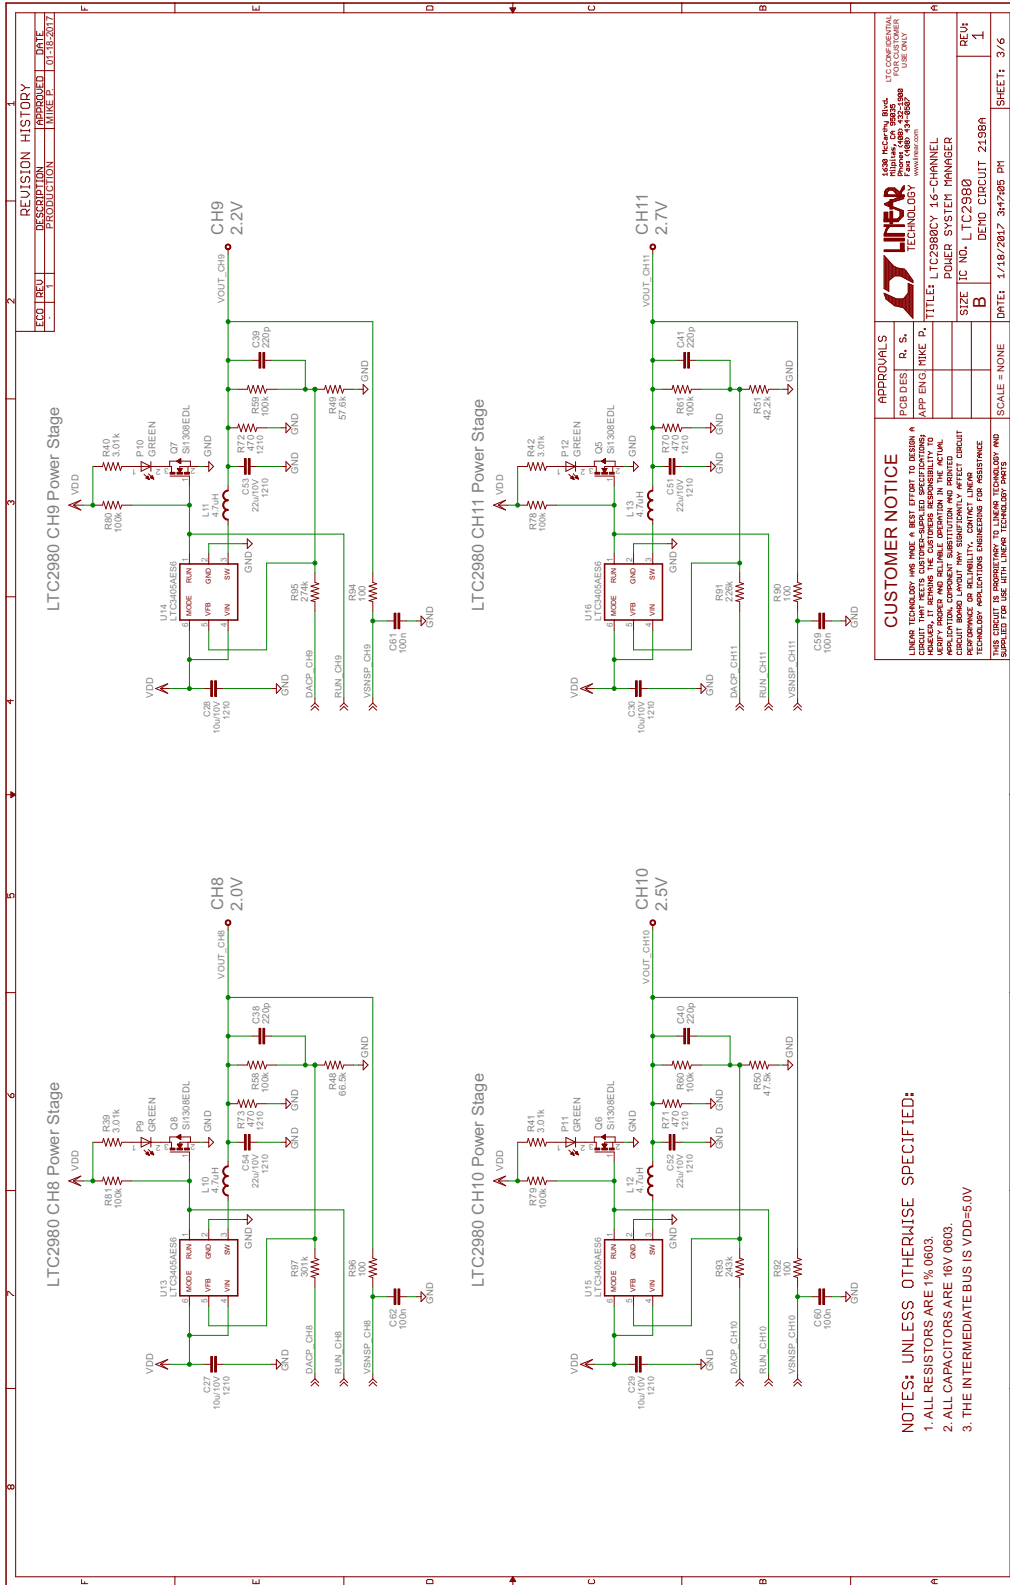

CUSTOMER NOTICE

LINEAR TECHNOLOGY HAS MADE A BEST EFFORT TO DESIGN A CIRCUIT THAT MEETS CUSTOMER-SPECIFIED SPECIFICATIONS. HOWEVER, THE ACTUAL PERFORMANCE OF THE CIRCUIT MAY VARY FROM THE SPECIFICATIONS DUE TO MANUFACTURING TOLERANCES AND OTHER FACTORS. CUSTOMERS SHOULD VERIFY THE ACTUAL PERFORMANCE OF THE CIRCUIT UNDER THEIR OPERATING CONDITIONS. LINEAR TECHNOLOGY ACCEPTS NO LIABILITY FOR DAMAGES OF ANY KIND ARISING FROM THE USE OF THIS SCHEMATIC DIAGRAM.


LINEAR TECHNOLOGY
LTC2980CY 16-CHANNEL
ORDER SYSTEM DRIVERS

SIZE: IC NO. LTC2980
DEM0 CIRCUIT 2198A

SCALE = NONE
DATE: 1/18/2017 3:47:09 PM
SHEET: 3/6

- NOTES: UNLESS OTHERWISE SPECIFIED:**
1. ALL RESISTORS ARE 1% 0603.
 2. ALL CAPACITORS ARE 10V 0603.
 3. THE INTERMEDIATE BUS IS VDD=5.0V

SCHEMATIC DIAGRAM

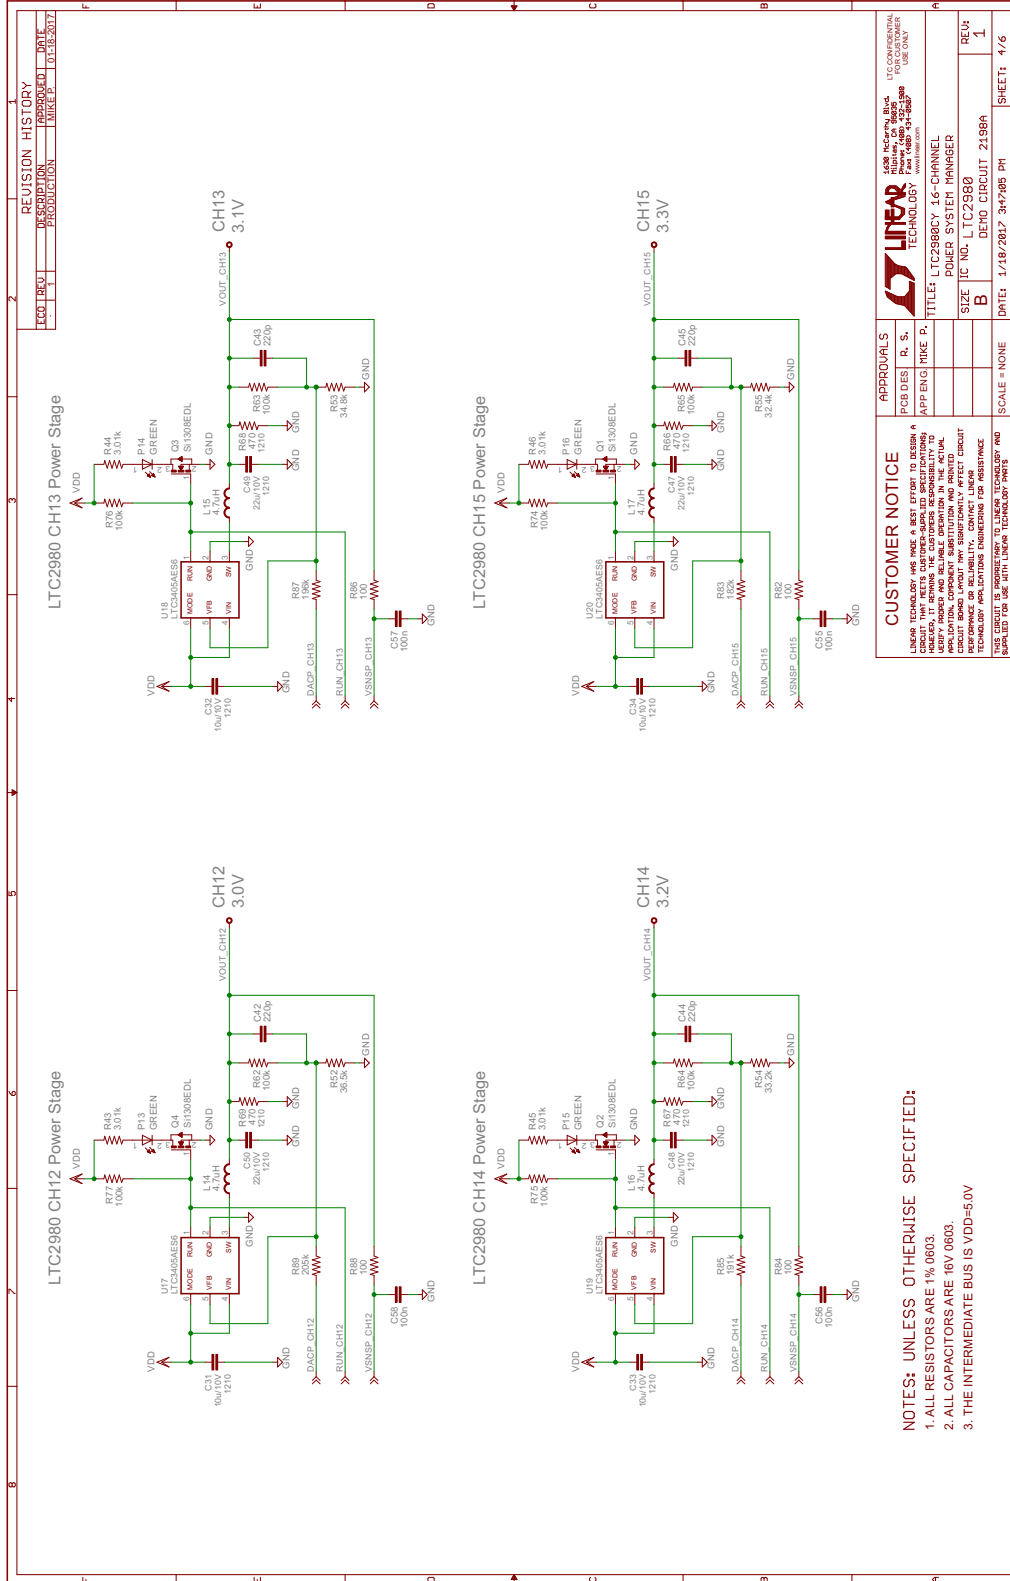

REVISION HISTORY	
REV	DESCRIPTION
1	PRODUCTION
2	WORK IN PROGRESS
3	DATE: 01/28/2012

APPROVALS	R. S.
PAGE DES	MIKE P.
APP ENG	
TITLE	LTC2980CY 16-CHANNEL POWER SYSTEM MANAGER
SIZE	IC NO. LTC2980
REV	1
DATE	1/18/2012 3:47:05 PM
SHEET	4/6

CUSTOMER NOTICE


LINEAR TECHNOLOGY HAS MADE A BEST EFFORT TO DESIGN A CIRCUIT THAT MEETS CUSTOMER-SPECIFIED SPECIFICATIONS. HOWEVER, CUSTOMER-SPECIFIED SPECIFICATIONS MAY VARY FROM THE ACTUAL PERFORMANCE OF THE CIRCUIT. CUSTOMER SPECIFICATIONS SHOULD BE BASED ON THE ACTUAL PERFORMANCE OF THE CIRCUIT. CUSTOMER SPECIFICATIONS SHOULD BE BASED ON THE ACTUAL PERFORMANCE OF THE CIRCUIT. CUSTOMER SPECIFICATIONS SHOULD BE BASED ON THE ACTUAL PERFORMANCE OF THE CIRCUIT.

NOTES: UNLESS OTHERWISE SPECIFIED:


1. ALL RESISTORS ARE 1% 0603.
2. ALL CAPACITORS ARE 16V 0603.
3. THE INTERMEDIATE BUS IS VDD=5.0V

DEMO MANUAL DC2198A

SCHEMATIC DIAGRAM

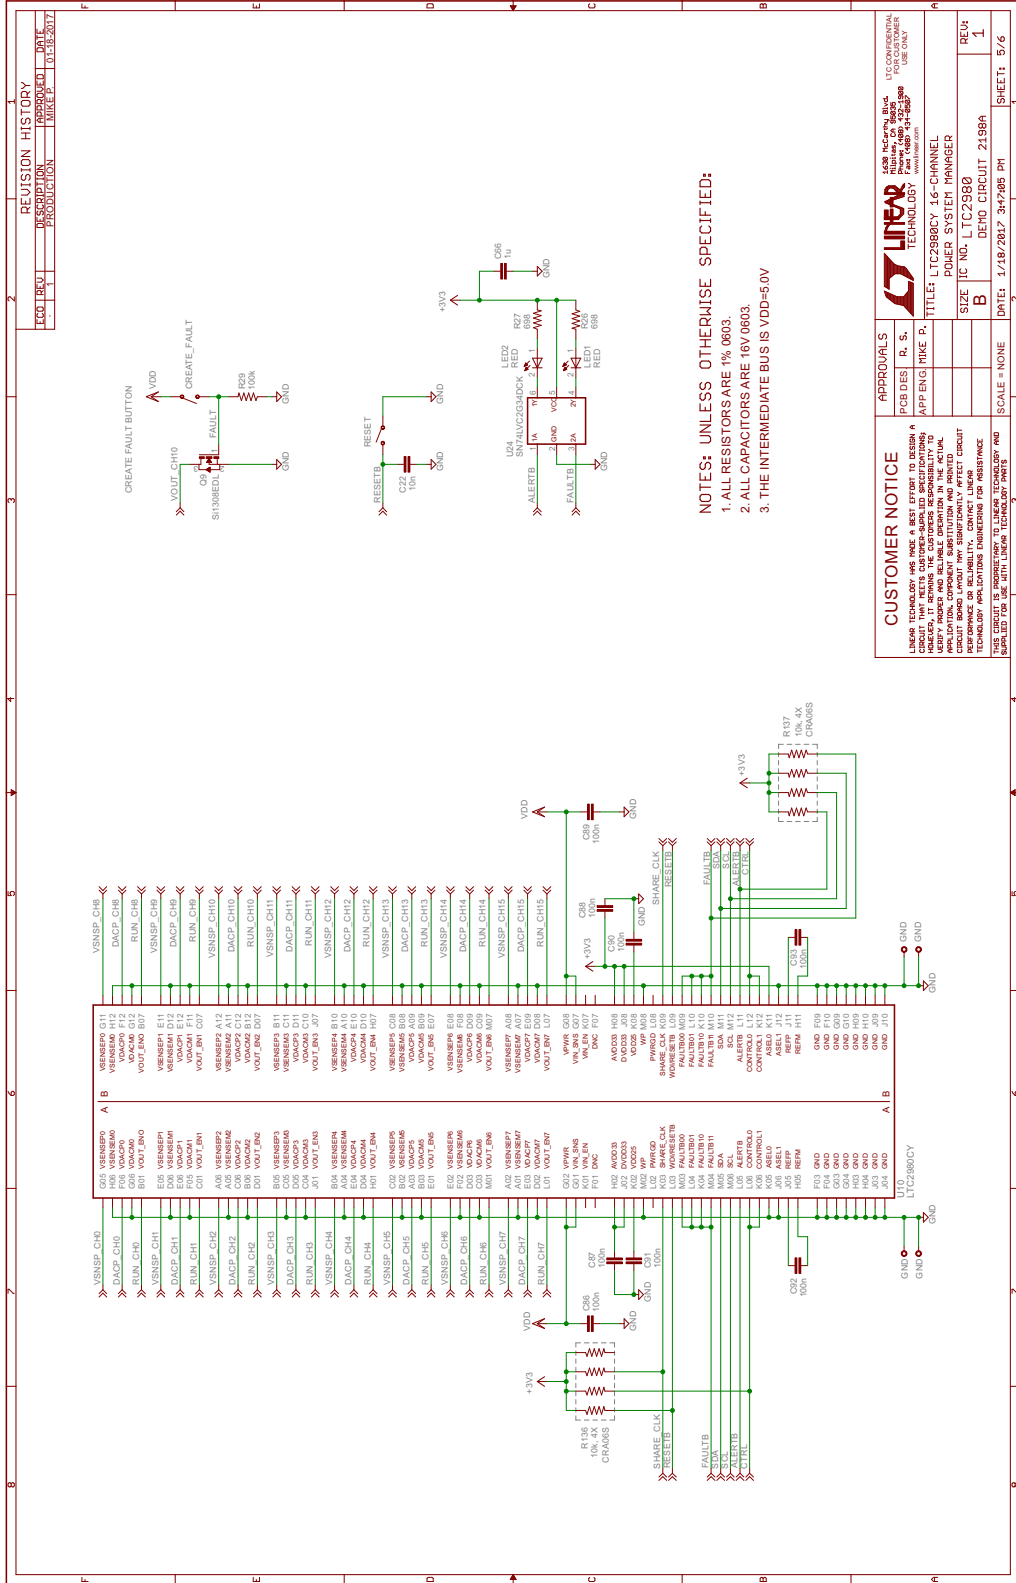

SCHEMATIC DIAGRAM

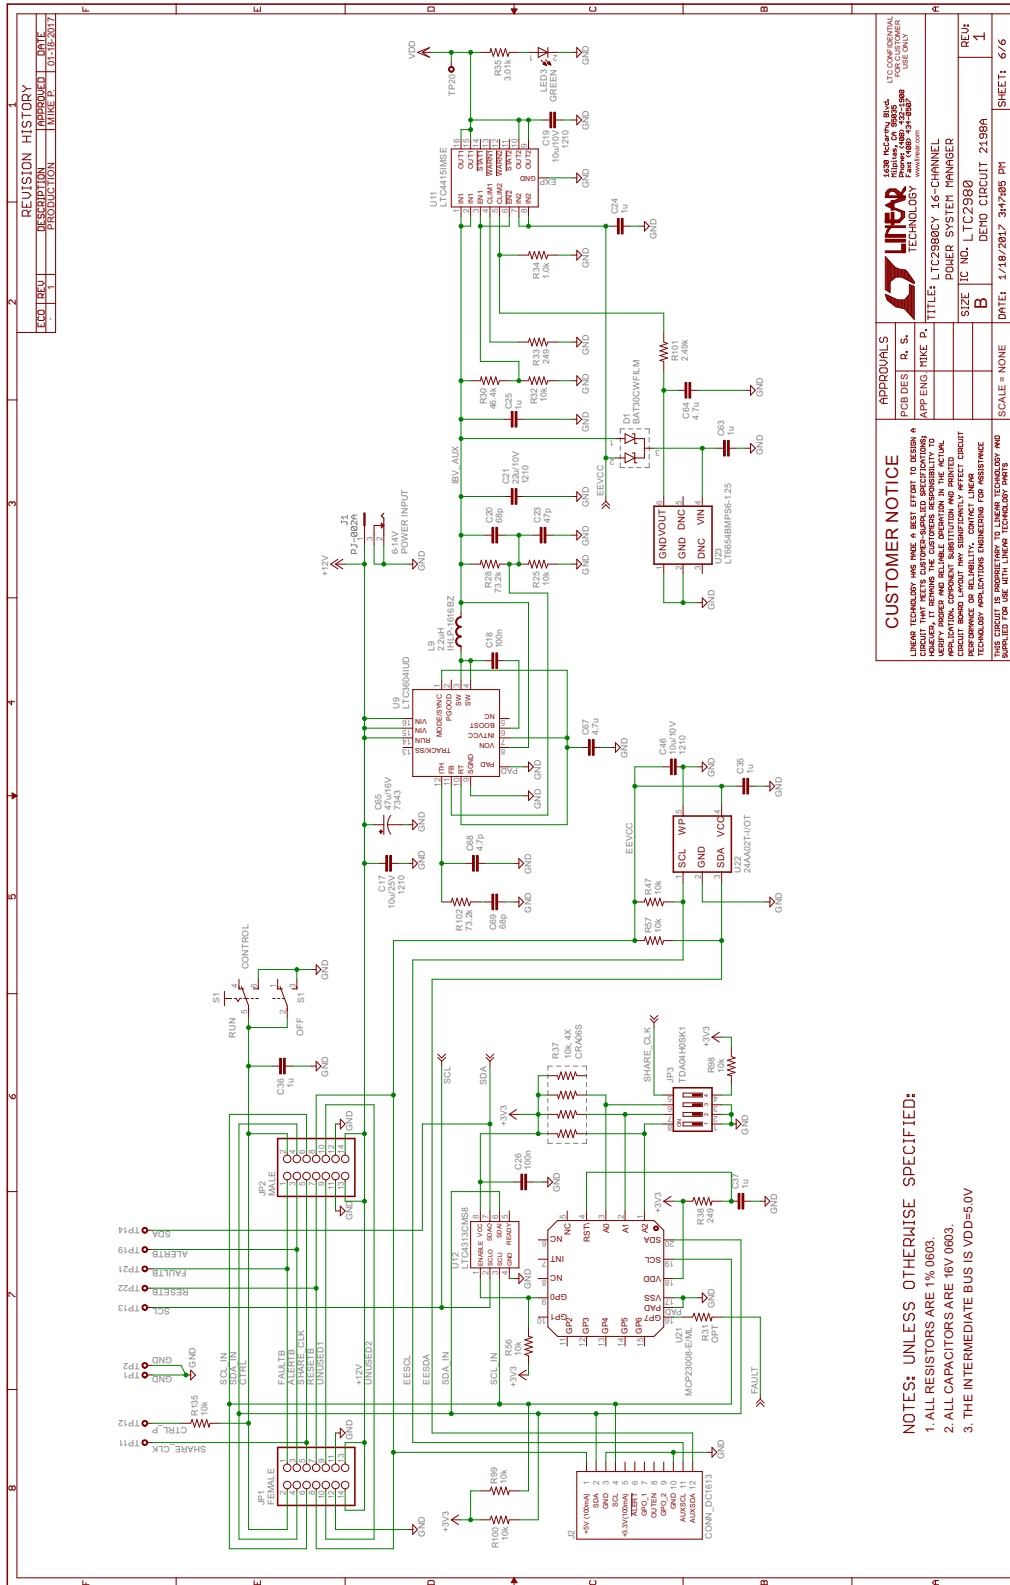

REVISION HISTORY		DATE
1	DESCRIPTION	DATE
2	PRODUCTION	DATE

APPROVALS	R. S.	P.
PBR DES		
APP ENG		
MARKET		
TEST		
MANUFACTURE		
FIELD		

CUSTOMER NOTICE
 Linear Technology Inc. uses caution in designating a circuit that meets customer-specified specifications. It is the customer's responsibility to verify the actual performance of the circuit in their application. Component specifications are printed in the actual data sheet for the component. Contact Linear Technology representative for assistance.

LINEAR
 6090 N. DE SOTO AVE.
 FORT MYERS, FL 33907
 TEL: 888.375.4634
 FAX: 888.776.4849
 WWW.LINEAR.COM

TITLE: LDC2980CY 16-CHANNEL
 POWER SYSTEM MANAGER
 SIZE: IC NO. LDC2980
 DEMO CIRCUIT 2198A
 SCALE: NONE
 DATE: 1/18/2017 3:47:28 PM
 SHEET: 6/6

- NOTES: UNLESS OTHERWISE SPECIFIED:**
1. ALL RESISTORS ARE 1% 0603.
 2. ALL CAPACITORS ARE 16V 0603.
 3. THE INTERMEDIATE BUS IS VDD=5.0V



ESD Caution

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.