
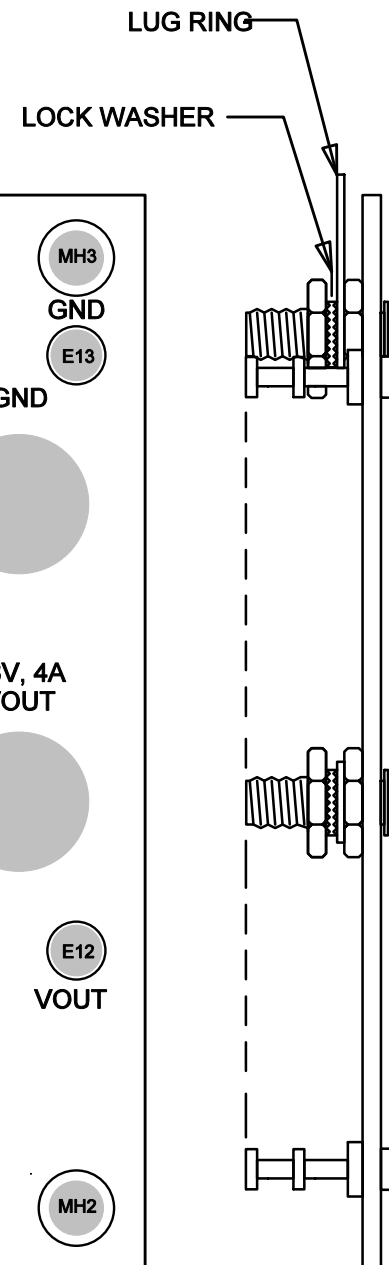


NOTES: UNLESS OTHERWISE SPECIFIED

1. WORKMANSHIP SHALL BE IN ACCORDANCE WITH IPC-A-610.
2. INSTALL SHUNTS AS SHOWN.
3. DEPANELIZE BOARDS AFTER ASSEMBLY AND ROUTE-OUT THE BREAKOUT TABS ON FOUR SIDES OF THE BOARD EDGE.
4. PARTS TO OMIT WILL BE SPECIFIED ON THE BILL OF MATERIALS. LOCATIONS OF OMITTED PARTS SHALL BE FREE OF SOLDER. MASK THE SOLDER STENCIL WHERE SMT PARTS ARE OMITTED.

5. DO NOT APPLY ANY KIND OF ASSEMBLY STAMP OR QA STAMP TO ANY BOARD.
6. STUD, PRESS-FIT, KFH-032-10 (PRESS FIT AND SOLDER, BOTTOM SIDE) LUG, RING, #10 (FACE RING LUG AT EDGE OF THE BOARD)

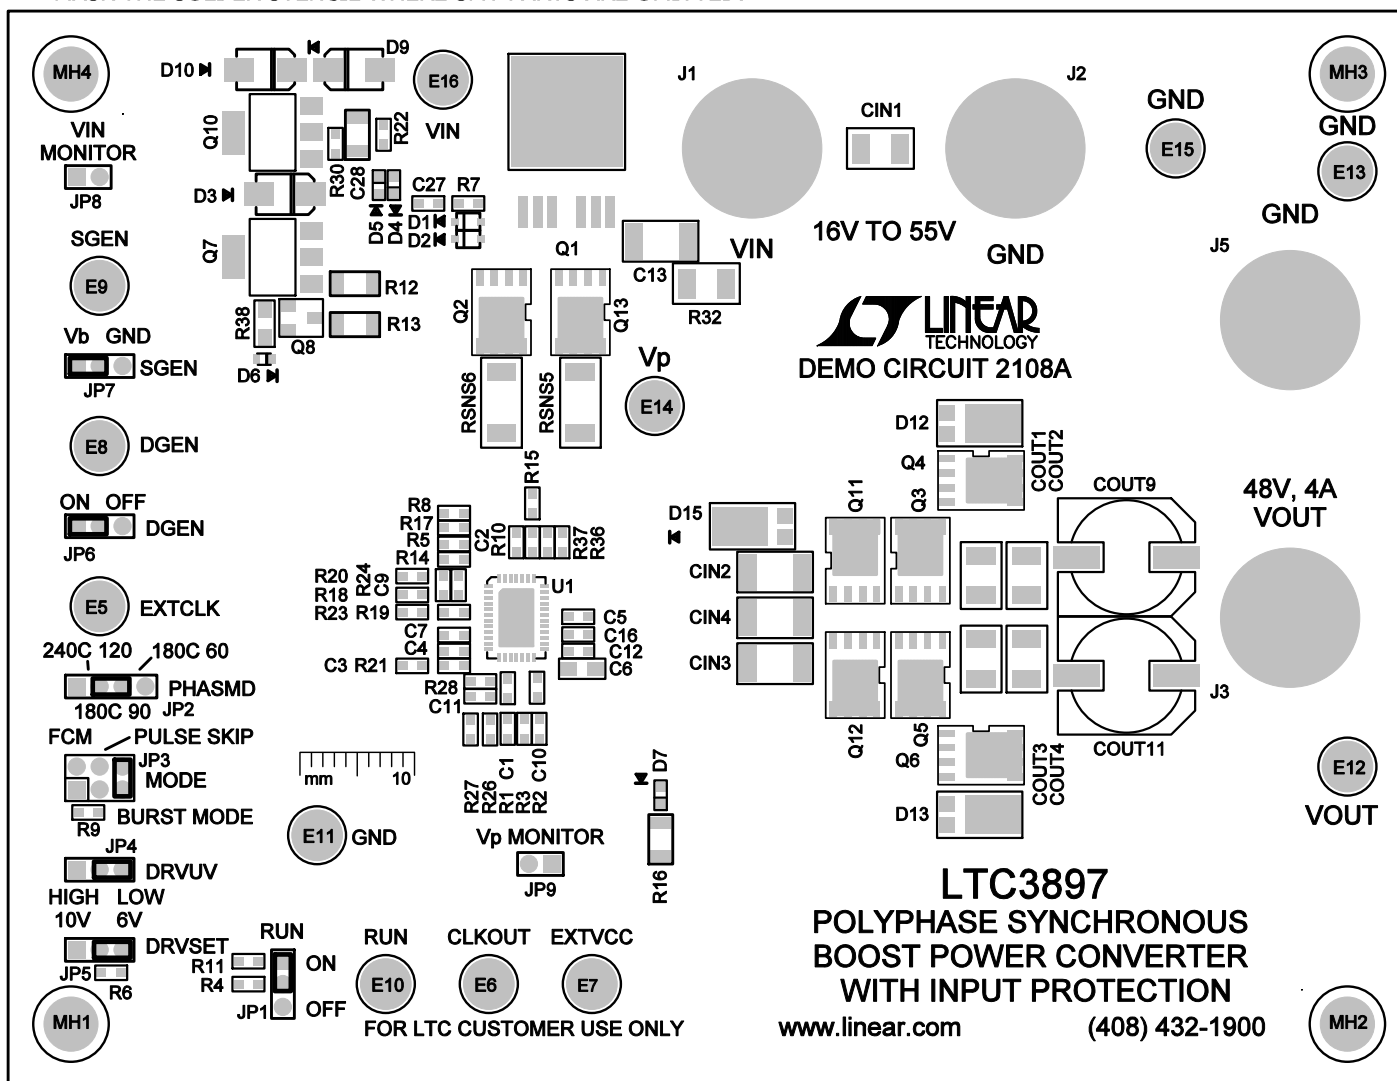

LINEAR TECHNOLOGY CORPORATION

DC2108A REV 2

09/08/15

TOP ASSEMBLY

TOP SILKSCREEN