

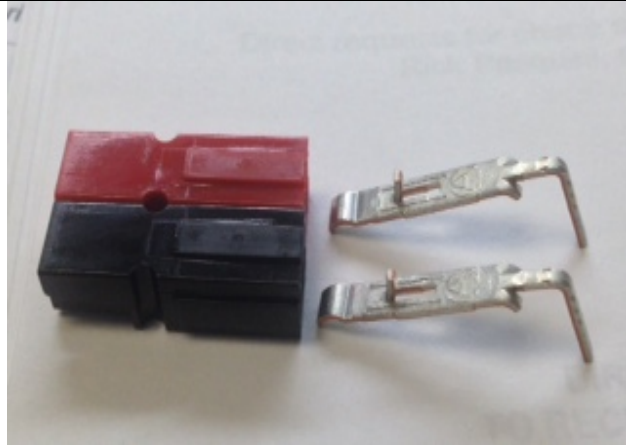
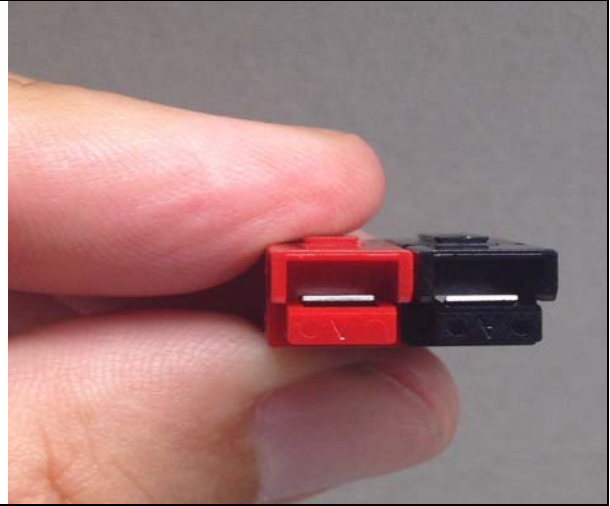
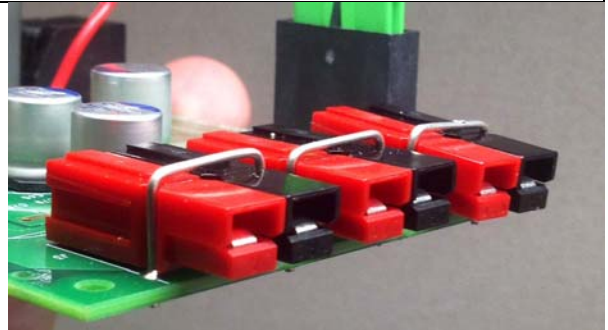


Assembling Anderson connectors

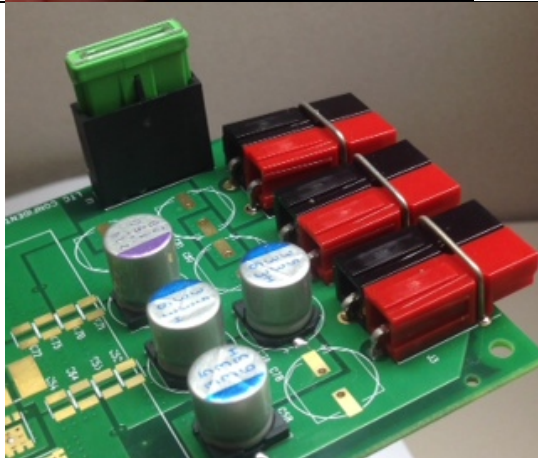

Place housings side by side as shown, and slide them together. Pay attention to the top right picture! There is a right way and a wrong way to assemble these housings. Insert two contacts as shown. The contacts are still loose in the housings.

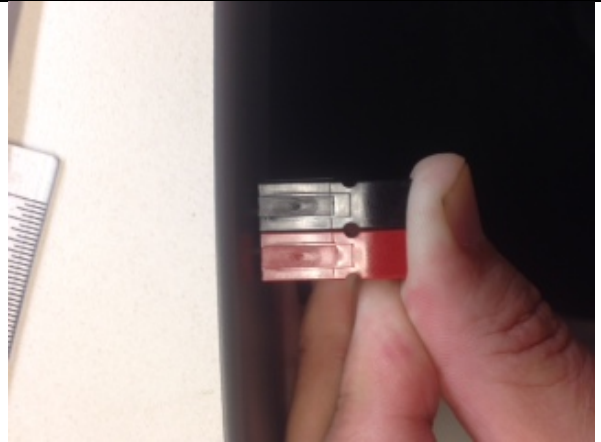

Hold the housings as shown, place the contacts against a hard surface and push until the contacts click in place.

Mount the Anderson connectors as shown into the pcb. Solder the U-shaped wires to hold the connectors in place.