


THIS ASSEMBLY INCORPORATES
STATIC SENSITIVE DEVICES
ASSEMBLY AND HANDLING MUST BE DONE AT AN
APPROVED STATIC FREE STATION

CAUTION

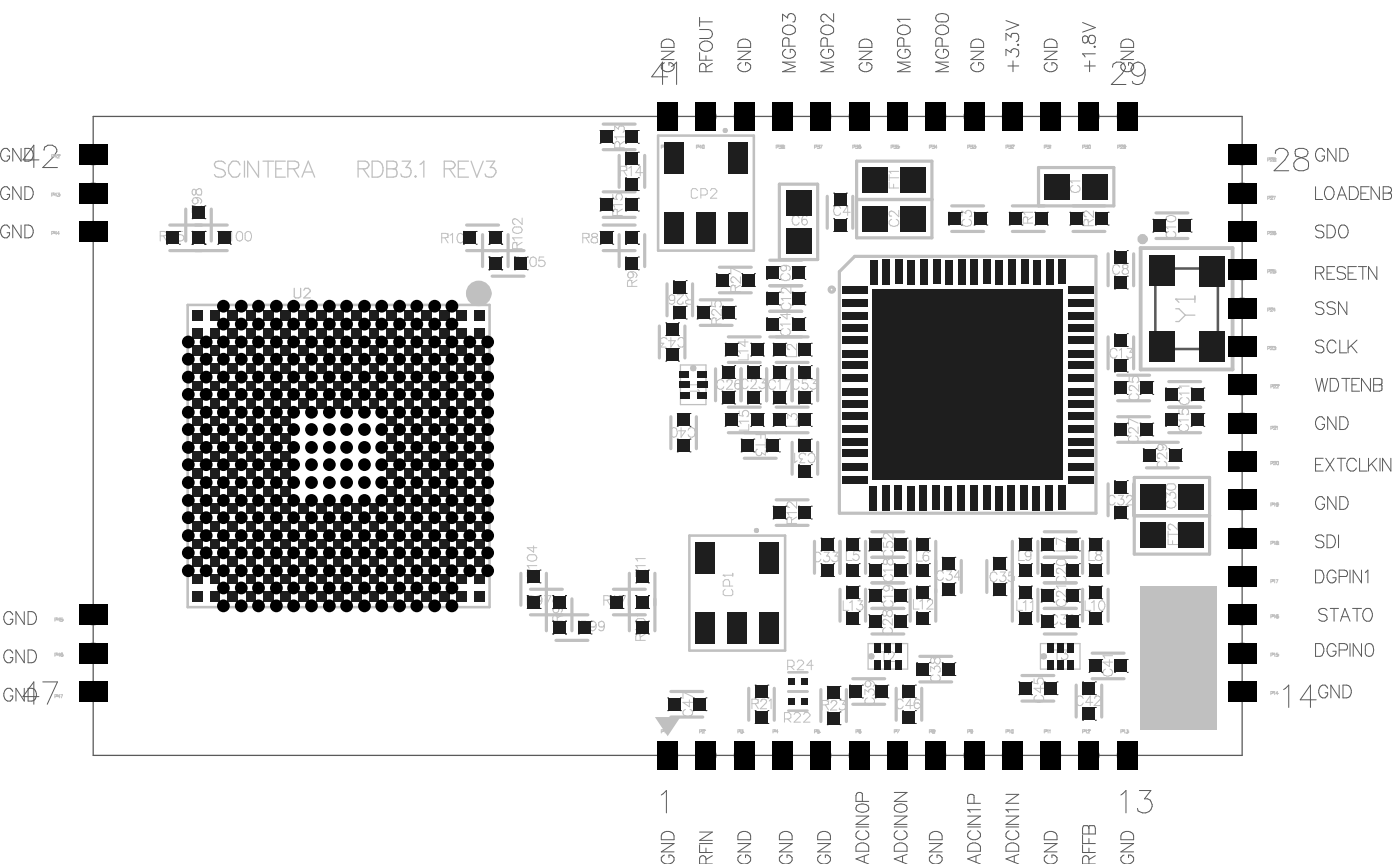


ASSEMBLY DRAWING

(RDB3.1 REV3)

SILK TOP

ASSY TOP


ALL PROCESSES MUST BE ROHS COMPLIANT.

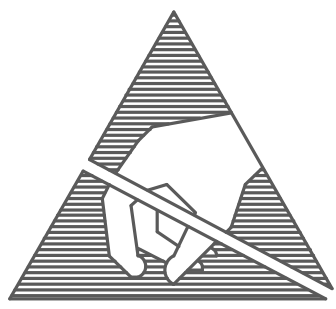

CAUTION

THIS ASSEMBLY INCORPORATES
STATIC SENSITIVE DEVICES
ASSEMBLY AND HANDLING MUST BE DONE AT AN
APPROVED STATIC FREE STATION

CAUTION

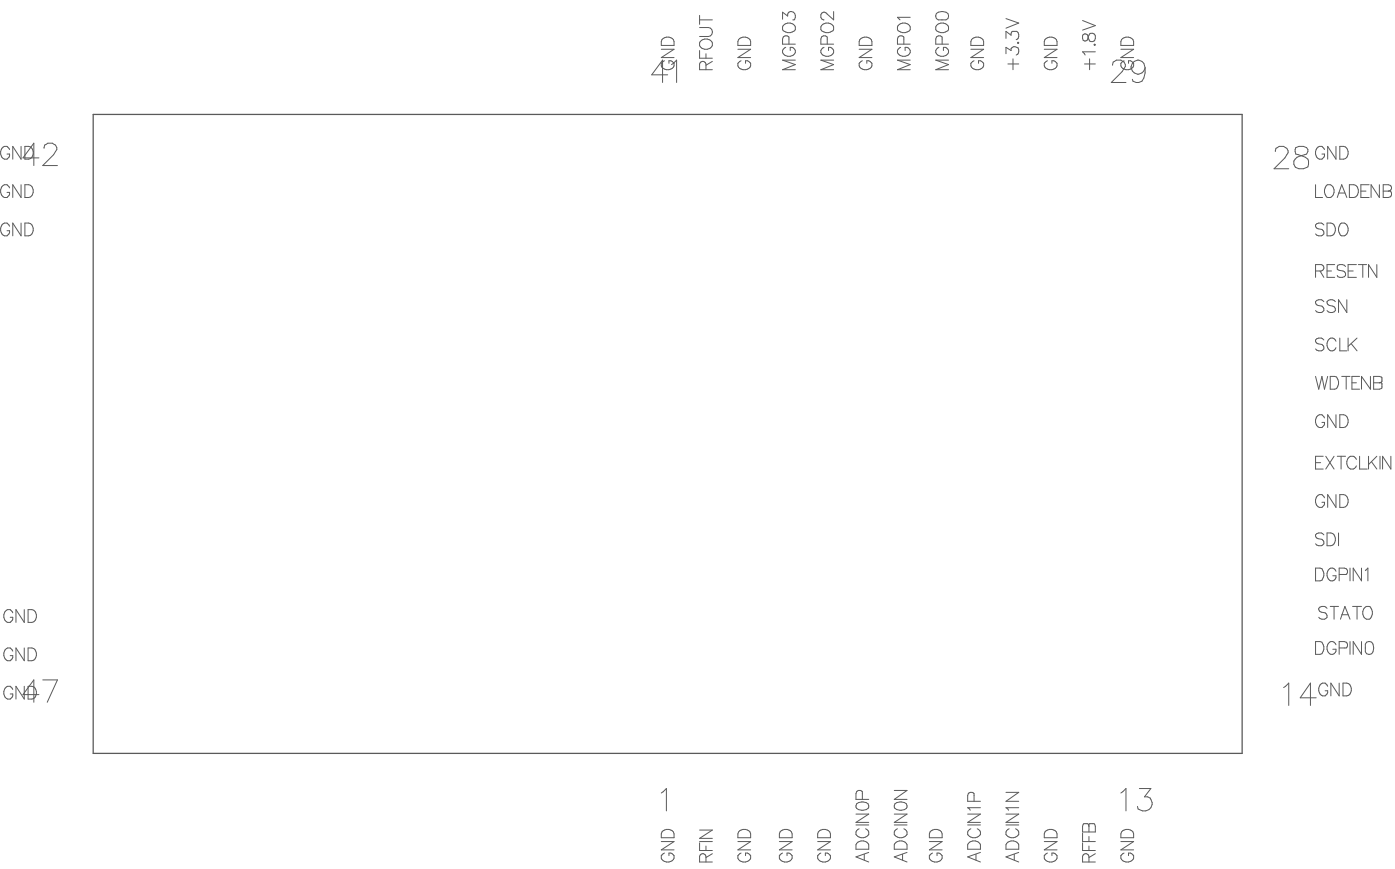

SCINTERA

SC1894-DB500A ASSEMBLY DRAWING

(RDB3.1 REV3)

ASSY TOP

THIS ASSEMBLY INCORPORATES
STATIC SENSITIVE DEVICES
ASSEMBLY AND HANDLING MUST BE DONE AT AN
APPROVED STATIC FREE STATION

CAUTION




SC1894—DB500A ASSEMBLY DRAWING

(RDB3.1 REV3)

ASSY TOP


ALL PROCESSES MUST BE ROHS COMPLIANT.

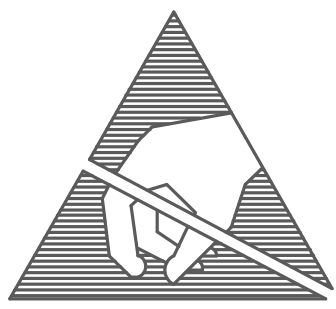

CAUTION

THIS ASSEMBLY INCORPORATES
STATIC SENSITIVE DEVICES
ASSEMBLY AND HANDLING MUST BE DONE AT AN
APPROVED STATIC FREE STATION

CAUTION

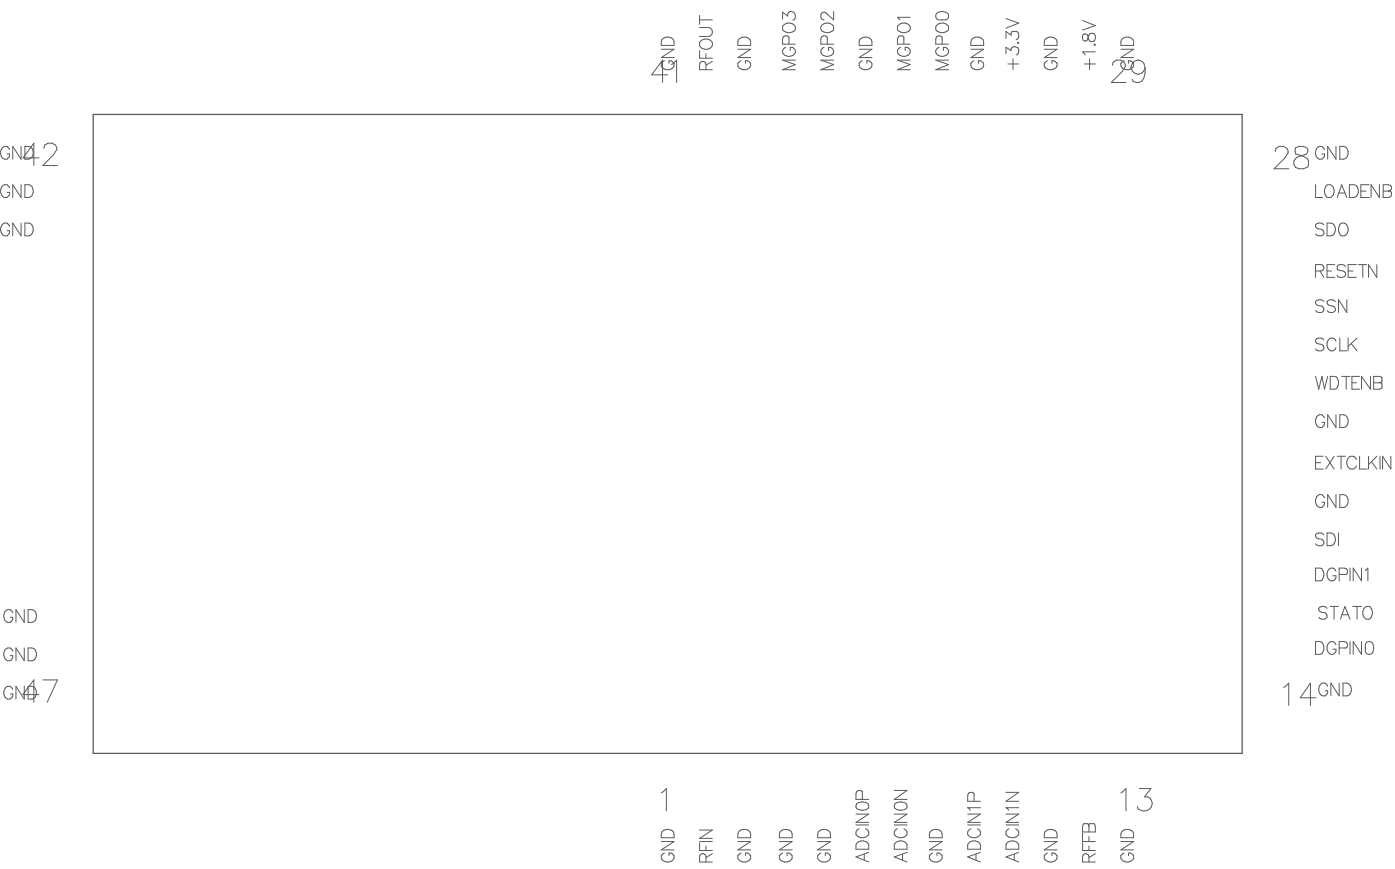

SCINTERA

SC1894-DB500A ASSEMBLY DRAWING

(RDB3.1 REV3)

ASSY TOP